

QUICK START GUIDE • 快速啟動指南

BOSE

SOUNDTOUCH® 300


START HERE

Please read and keep all safety and use instructions. • 請閱讀並保管好所有安全和使用指示。



For more detailed instructions, check out
the online owner's guide:


global.bose.com/Support/ST300

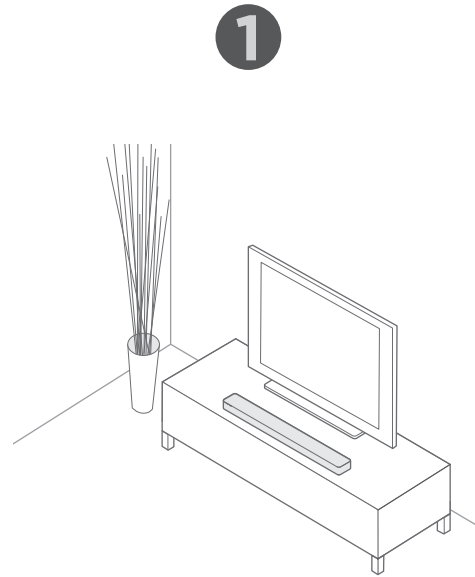


Place the soundbar

Keep at least 1 - 3 ft. (0.3 - 0.9 m) away from other
wireless equipment.

2

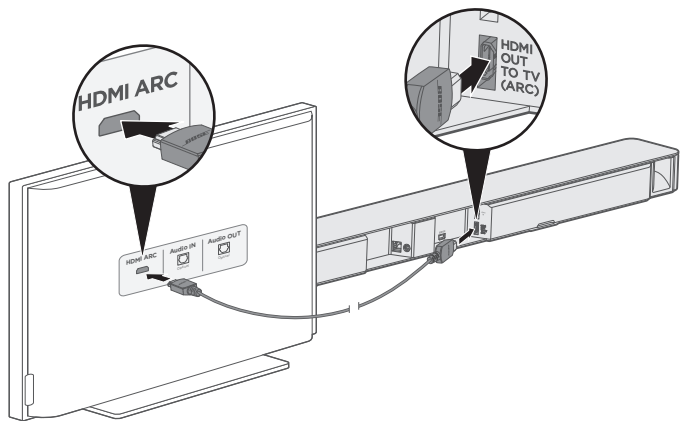

OR

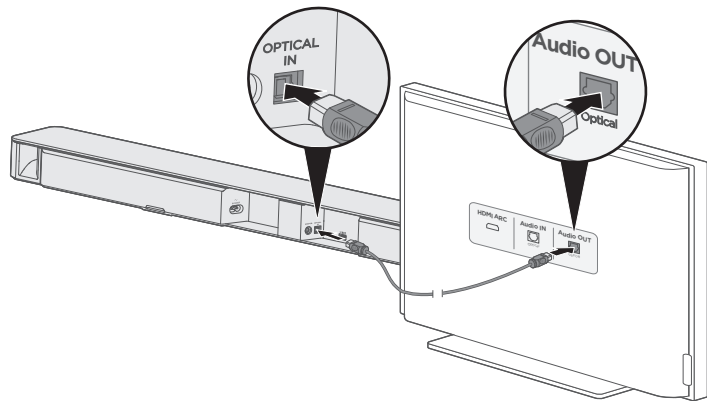

Choose an audio cable


Option 1 (Preferred): HDMI™ ARC

If your TV has an HDMI™ ARC connector, connect the HDMI cable to your TV's **HDMI ARC** connector and the soundbar's **HDMI OUT TO TV (ARC)** connector.


Option 2: Optical

If your TV doesn't have an HDMI ARC connector, connect the optical cable to your TV's **Optical OUT** connector and the soundbar's **OPTICAL IN** connector.

3

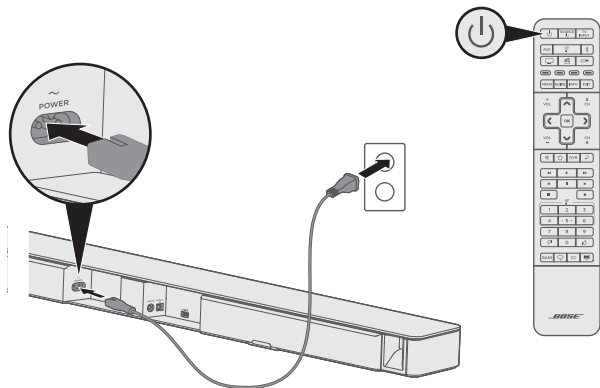


Power on the soundbar

1. Connect the soundbar to power.
2. On the remote control, press .

NOTE: If you hear distorted audio, turn off your TV's speakers (refer to your TV owner's guide). If you don't hear any audio, try the troubleshooting steps after step 7.

4

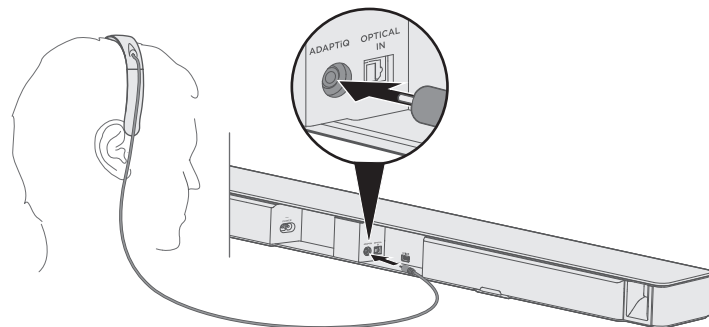


Set up ADAPTiQ® audio calibration

1. Connect the ADAPTiQ® headset to the soundbar.
2. Put the headset on your head.

NOTE: If pairing the optional bass module or surround speakers, complete pairing before running ADAPTiQ audio calibration.

5

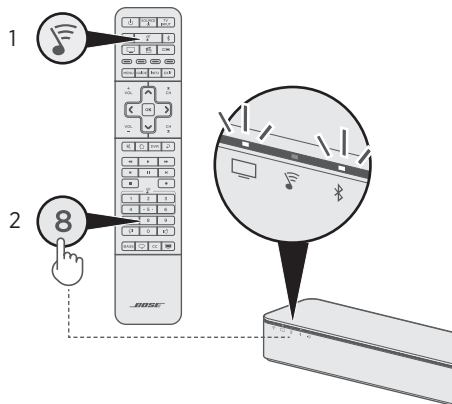


Run ADAPTiQ® audio calibration

1. On the remote control, press .
2. Press and hold **8** until and on the soundbar glow green.

NOTE: To cycle through languages, press and on the navigation pad.

6

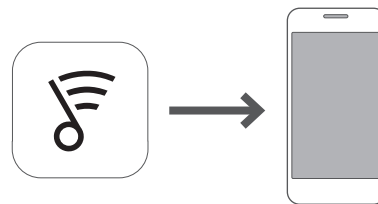

Download the SoundTouch® app*

Download the app to play streaming music, access music services, adjust additional settings for the soundbar and try new features through software updates.

*If using a computer go to global.Bose.com/Support/ST300 to download the app.

7



Program the remote control

Refer to the Universal Remote Control Setup Guide (provided) for instructions on programming and using the remote to control your sources.

?

No audio?

Try these troubleshooting steps:


- Make sure the soundbar's HDMI cable is inserted into an **HDMI ARC** or **Audio Return Channel** connector on your TV, not a standard HDMI connector.
- If the soundbar is connected to your TV's HDMI ARC connector, make sure that Consumer Electronics Control (CEC) is enabled in your TV system menu. Your TV may refer to CEC by a different name. Refer to your TV owner's guide.
NOTE: CEC is fully enabled on the soundbar by default.
- Connect to the soundbar using both the HDMI cable (inserted into your TV's HDMI ARC connector) and the optical cable (see step 2, "Choose an audio cable").

For complete troubleshooting information, refer to the online owner's guide at:

global.bose.com/Support/ST300




有關更詳細的指示，請查看線上使用者指南：
global.bose.com/Support/ST300

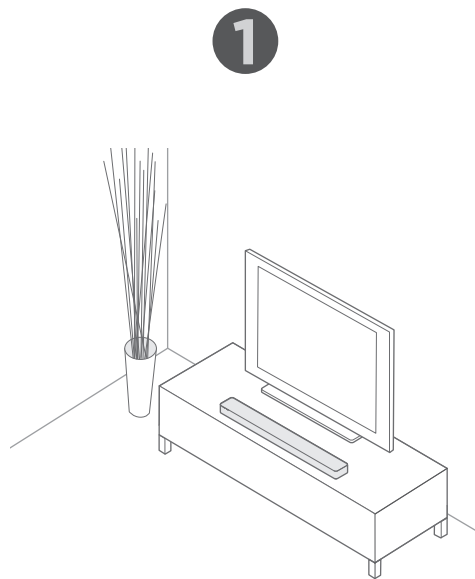


放置條形音箱

請將其與其他無線設備保持至少 0.3 - 0.9 m 的距離。

2

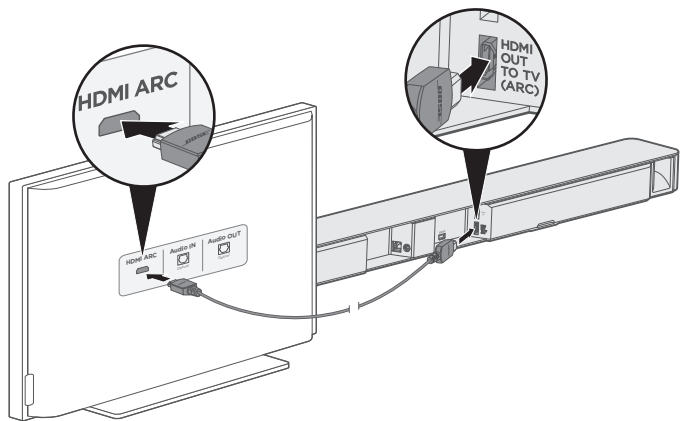

或

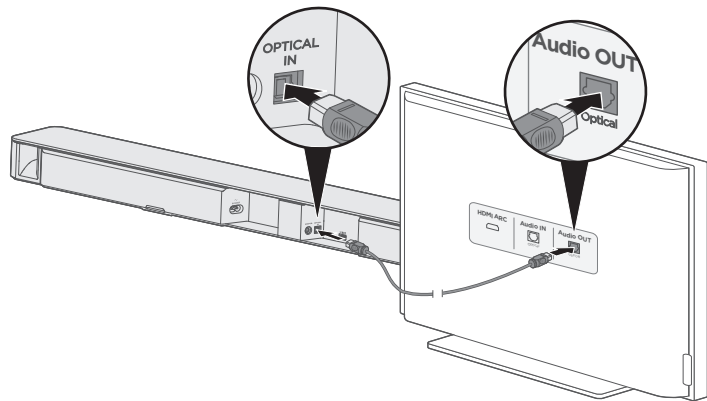

選擇音訊連接線


選項 1 (優先)：HDMI™ ARC

若您的電視有 HDMI™ ARC 連接器，請將 HDMI 連接線連接至電視的 **HDMI ARC** 連接器和條形音箱的 **HDMI OUT TO TV (ARC)** 連接器上。


選項 2：光纖

若您的電視沒有 HDMI ARC 連接器，請將光纖連接至電視的 **Optical OUT** 連接器和條形音箱的 **OPTICAL IN** 連接器上。

3

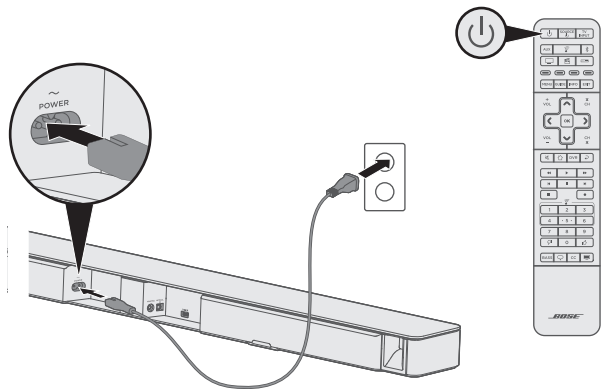


打開條形音箱

 1. 將條形音箱連接到電源。
2. 在控制器上按 .

備註：若音訊扭曲變調，請關閉您的電視揚聲器（請參見電視使用者指南）。若未聽到聲音，請嘗試步驟 7 之後的疑難排解步驟。

4

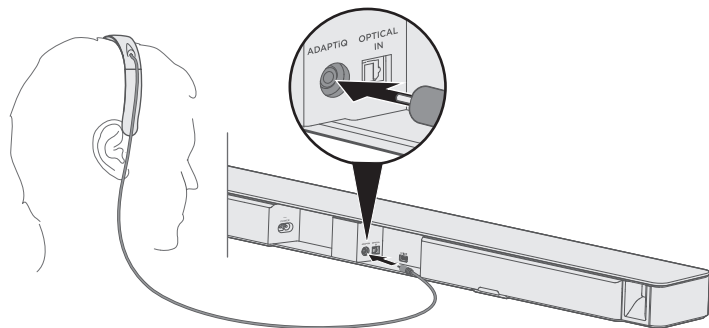


設定 ADAPTiQ® 音場調校




1. 將 ADAPTiQ® 耳機連接至條形音箱。
2. 將耳機戴在頭上。

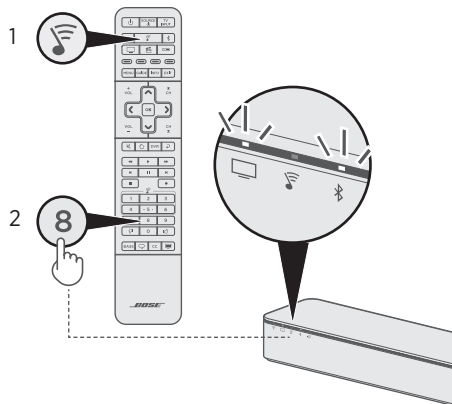

備註：若正配對可選的低音音箱或環繞揚聲器，請先完成配對，然後運行 ADAPTiQ 音場調校。

5




運行 ADAPTiQ® 音場調校

1. 在控制器上按 。
2. 按住 **8** 直到條形音箱上的  和  閃爍綠色。

備註：要瀏覽語言，請按導覽板上的  和 。

6

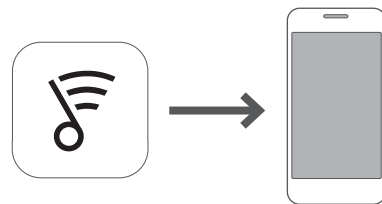

下載 SoundTouch™ 應用程式 *

下載應用程式以播放串流音樂、存取音樂服務、調整條形音箱的其他設定並透過軟體更新嘗試新功能。

* 若使用電腦，請訪問 global.Bose.com/Support/ST300 下載該應用程式。

7



程式設計遙控器

參考通用遙控器安裝指南（已提供）中關於程式設計和利用遙控器控制音訊源的指示。

?

沒有聲音？

嘗試以下疑難排解步驟：

- 請確保條形音箱的 HDMI 連接線已插入電視上的 **HDMI ARC** 或 **Audio Return Channel** 連接器，而不是標準的 HDMI 連接器。
- 如果條形音箱已連接到電視的 HDMI ARC 連接器，請確保已啟用電視系統功能表中的 Consumer Electronics Control (CEC)（消費電子產品控制）。您的電視上的 CEC 可能使用其他的名稱。請參閱電視使用者指南。

備註：預設情況下，條形音箱上的 CEC 會全面啟動。

- 使用 HDMI 連接線（已插入電視的 HDMI ARC 連接器）和光纖連接線連接條形音箱（請參見步驟 2，「選擇音訊連接線」）。

有關完整的疑難排解資訊，請參見線上使用者指南：

global.bose.com/Support/ST300



global.bose.com/Support/ST300



788926-0020

©2018 Bose Corporation, The Mountain,
Framingham, MA, 01701-9168 USA
AM788926-0020 Rev. 00