

**SOUNDBAR 850**

## Please read and keep all safety, security, and use instructions.

### Important Safety Instructions

Read these instructions.

Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### WARNINGS/CAUTIONS



This symbol on the product means there is uninsulated, dangerous voltage within the product enclosure that may present a risk of electrical shock.



This symbol on the product means there are important operating and maintenance instructions in this guide.



Contains small parts which may be a choking hazard. Not suitable for children under age 3.




This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.



This product contains a tempered glass surface. Use caution to avoid impact. In the event of breakage, use care in handling broken glass.

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use a power inverter with this product.
- Do NOT use in vehicles or boats.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Only use the following hardware to mount this product: Bose Soundbar Wall Bracket.
- When positioning the product, make sure it is not blocking any ventilation openings on your TV or monitor. Refer to the owner's guide that came with your TV or monitor and install in accordance with the manufacturer's instructions.
- Due to ventilation requirements, Bose does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.
- Keep batteries out of reach of children.
- Batteries may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat, or incinerate.

## China Restriction of Hazardous Substances Table

Names and Contents of Toxic or Hazardous Substances or Elements						
	Toxic or Hazardous Substances and Elements					
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal Parts	X	0	0	0	0	0
Plastic Parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.						

**Date of Manufacture:** The eighth digit in the serial number indicates the year of manufacture; “1” is 2011 or 2021.

**China Importer:** Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100

**Input Rating:** 100 - 240V ~ 50/60Hz, 65W

The CMIIT ID is located on the product label on the back of the soundbar.

### Security Information




This product is capable of receiving automatic security updates from Bose. To receive automatic security updates, you must complete the product setup process in the Bose音乐 app and connect the product to the Internet. **If you do not complete the setup process, you will be responsible for installing security updates that Bose makes available.**

Apple, the Apple logo, Apple Music, and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

 **Dolby Atmos** Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2020 Dolby Laboratories. All rights reserved.

Android is a trademark of Google LLC.

 **HDMI**™ The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Wi-Fi is a registered trademark of Wi-Fi Alliance®.

ADAPTiQ, Bose, Bose Bass Module, Bose Noise Cancelling Headphones, Bose Soundbar, Bose Soundbar Wall Bracket, Bose Surround Speakers, QuietComfort, SimpleSync, SoundLink, and SoundLink Revolve are trademarks of Bose Corporation.

©2022 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

To view the license disclosures that apply to the third-party software packages included as components of your Bose Soundbar 850 product:

1. On the remote, press and hold the *Bluetooth* button  and Skip backward button  for 5 seconds.
2. Connect a USB cable to the SERVICE connector on the back of the soundbar.
3. Connect the other end of the cable to a computer.
4. On the computer, enter <http://203.0.113.1/opensource> in a browser window to display the EULA and license disclosure.

## WHAT'S IN THE BOX

Contents .....	9
----------------	---

<b>DOLBY ATMOS® TECHNOLOGY</b> .....	10
--------------------------------------	----

## SOUNDBAR PLACEMENT

Recommendations.....	11
Wall mount the soundbar .....	12
Adjust audio for wall mounting.....	12

## SET UP THE SOUNDBAR

Connect the soundbar to power.....	13
Network standby.....	13

## BOSE音乐 APP SETUP

Download the Bose音乐 app.....	14
Connect to a different Wi-Fi network or remove from network.....	14

## ADAPTiQ AUDIO CALIBRATION

Run ADAPTiQ audio calibration.....	15
------------------------------------	----

## SOUNDBAR CONTROLS

Remote functions.....	16
Power on/off.....	17
Auto-wake (optical connection only).....	17
Sources .....	18
Media playback and volume.....	19
Adjust the audio.....	20

## **BLUETOOTH® CONNECTIONS**

Connect a mobile device .....	21
Disconnect a mobile device.....	22
Reconnect a mobile device.....	22
Connect an additional mobile device .....	22
Clear the soundbar device list .....	22

## **STREAM AUDIO WITH AIRPLAY**

Stream audio from the Control Center.....	23
Stream audio from an app .....	23

## **SOUNDBAR STATUS**

Wi-Fi® status .....	24
<i>Bluetooth</i> status .....	24
Media playback and volume status .....	25
Update and error status .....	25

## **CONNECT BOSE PRODUCTS**

Connect using the Bose音乐 app (preferred) .....	26
Connect using the remote.....	27
Connect a Bose bass module using an audio cable.....	28
Connect a Bose SoundLink <i>Bluetooth</i> speaker or Bose headphones using SimpleSync™ technology.....	29
Benefits.....	29
Compatible products .....	29
Connect using the Bose音乐 app .....	30
Reconnect a Bose SoundLink <i>Bluetooth</i> speaker or Bose headphones...	30

## CARE AND MAINTENANCE

Update the soundbar .....	31
Install the remote batteries.....	31
Clean the soundbar .....	32
Replacement parts and accessories.....	32
Limited warranty .....	32

## TROUBLESHOOTING

Try these solutions first .....	33
Other solutions .....	33

## APPENDIX: SETUP REFERENCE


Reset the soundbar.....	39
Connection options.....	40
Connect the soundbar to your TV .....	41
Option 1 (preferred): HDMI eARC or ARC.....	41
Option 2: Optical.....	42
Check for sound .....	43

## CONTENTS


Confirm that the following parts are included:




Bose Soundbar 850




Remote




AAA Battery (2)



Power cord



HDMI cable



Optical cable



ADAPTiQ headset


**NOTE:** If any part of the product is damaged or if the glass on the soundbar is broken, don't use it. Contact your authorized Bose dealer or Bose customer service.

Visit: [worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)


The Bose Soundbar 850 supports Dolby Atmos® technology. The soundbar uses additional up-firing speakers to deliver high-quality sound from all directions, achieving a superb, immersive, and fully-encompassing surround-sound experience.

## RECOMMENDATIONS

- Place the soundbar below and in front of the TV (preferred) or above your TV with the front of the soundbar facing into the room.
- For best sound quality, make sure the speakers on top of the soundbar (up-firing speakers) aren't blocked.
- When the soundbar is mounted to the wall, make sure the top of the soundbar is at least 4 in (10 cm) away from the TV.
- If placing the soundbar on a shelf or TV stand, position the front of the soundbar as close as possible to the front edge of the shelf or stand for best sound quality.
- Place the soundbar outside of and away from metal cabinets, other audio/video components, and direct heat sources.
- Place the soundbar on its rubber feet on a stable and level surface. For proper support, both feet must be resting on the surface. Vibration can cause the soundbar to move, particularly on smooth surfaces like marble, glass, or highly polished wood.
- Keep the back side of the soundbar at least 0.4 in (1 cm) from any other surface. Blocking the port(s) on this side affects sound quality.
- Make sure there is an AC (mains) outlet nearby.
- To avoid wireless interference, keep other wireless equipment at least 1 – 3 ft (0.3 – 0.9 m) away from the soundbar.
- To avoid wireless interference, some Wi-Fi access points may need to be placed up to 8 – 10 ft (2.4 – 3.0 m) away from the soundbar, optional bass module, and optional surround speakers.
- For best sound quality, don't place the soundbar in an enclosed cabinet or diagonally in a corner.
- Don't place any objects on top of the soundbar.

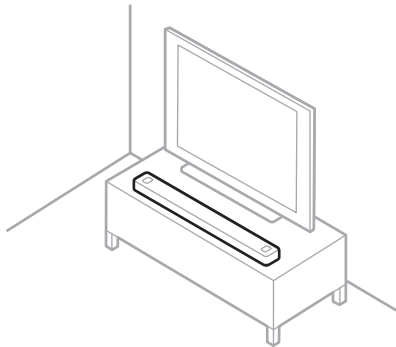

**CAUTION:** Do NOT place the soundbar on its front, back, or top when in use.

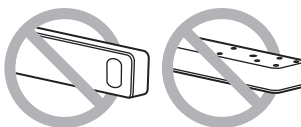

## WALL MOUNT THE SOUNDBAR

You can mount the soundbar on a wall. To purchase the Bose Soundbar Wall Bracket, contact your authorized Bose dealer.

Visit: [worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)

**NOTE:** Make sure the top of the soundbar is at least 4 in (10 cm) away from the TV.



**CAUTION:** Do NOT use any other hardware to mount the soundbar.


### Adjust audio for wall mounting

After you mount the soundbar, you must run ADAPTiQ (see page 15).

**NOTE:** If you remove the soundbar from the wall, run ADAPTiQ again.

## CONNECT THE SOUNDBAR TO POWER

1. Connect the power cord to the **POWER** port on the back of the soundbar.
2. Plug the other end of the power cord into an AC (mains) power outlet.

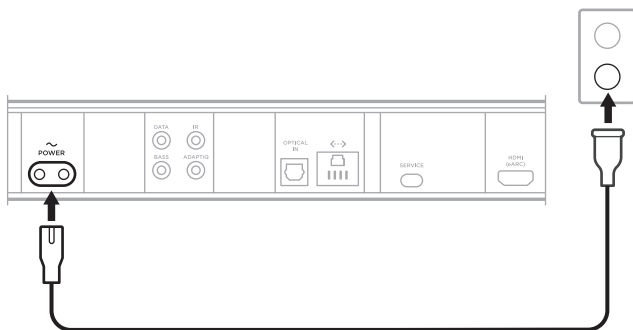


The soundbar powers on, and the light bar glows solid amber.

## NETWORK STANDBY

The soundbar transitions to network standby when audio has stopped and you have not pressed any buttons for 20 minutes.

To wake the soundbar from network standby:

- On the remote, press the Power button  or a source button (see page 18).
- Play or resume audio using your mobile device or using the Bose音乐 app.

**NOTE:** You can disable the standby timer using the Bose音乐 app. You can access this option from the Settings menu.

The Bose 音乐 app lets you set up and control the soundbar from any mobile device, such as a smartphone or tablet.

Using the app, you can learn how to set up your soundbar and accessories, manage soundbar settings, choose your voice prompt language, see Now Playing information, and get new features.

## DOWNLOAD THE BOSE 音乐 APP

1. On your mobile device, download the Bose 音乐 app.



2. Follow the app instructions.

## CONNECT TO A DIFFERENT WI-FI NETWORK OR REMOVE FROM NETWORK

If your network name or password has changed, you want to connect to a different network, or you want to remove the soundbar from your network, you must reset the soundbar (see page 39).

After you set up the soundbar using the Bose音乐 app, the app prompts you to run ADAPTiq audio calibration for best sound quality. ADAPTiq audio calibration customizes the sound of the system to the acoustics of your listening area by taking audio measurements at multiple locations in the room. To run an audio calibration, you need 10 minutes when the room is quiet.

During ADAPTiq audio calibration, a microphone on the top of the ADAPTiq headset (provided with the soundbar) measures the sound characteristics of your room to determine optimal sound quality.

## **RUN ADAPTiq AUDIO CALIBRATION**

If you later connect an optional bass module or surround speakers, move the soundbar, or move any furniture, run ADAPTiq audio calibration again to ensure optimal sound quality.


To run ADAPTiq audio calibration, use the Bose音乐 app. You can access this option from the Settings menu.

The soundbar controls are located on the top of the soundbar and on the remote.

**TIP:** You can also control your soundbar using the Bose音乐 app.

## REMOTE FUNCTIONS

Use the remote to control the soundbar or *Bluetooth* connections.

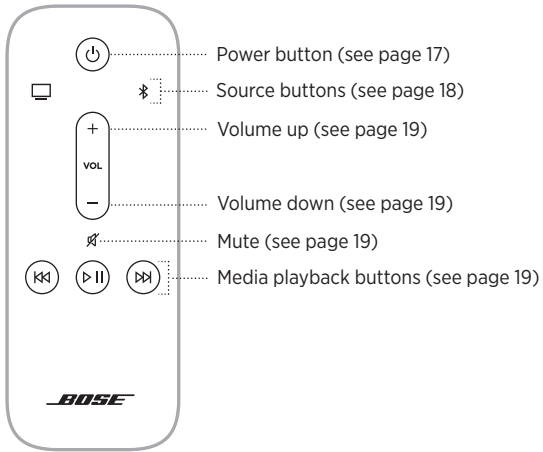

## Power on/off

On the remote, press the Power button  to power the soundbar on/off.




When powered on, the soundbar defaults to the last active source.

**NOTE:** When you plug the soundbar into an AC (mains) outlet, the soundbar automatically powers on.

## Auto-wake (optical connection only)



You can set the soundbar to power on whenever a sound signal is received.

To toggle between auto-wake and default power settings, press and hold  for 10 seconds until you hear a tone and the light bar pulses white twice.

**TIP:** You can also control auto-wake using the Bose音乐 app. You can access this option from the Settings menu.

## Sources


You can control your TV and *Bluetooth* connections using your remote.

To select a source, press the appropriate button (TV  or *Bluetooth* ) on the remote.



**TIP:** You can also use the Bose音乐 app to select a source.

## Media playback and volume

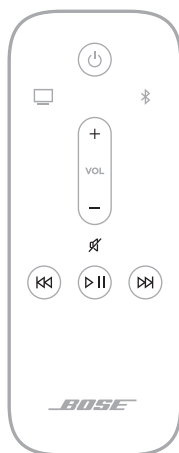


FUNCTION	WHAT TO DO
<b>Play/Pause</b>	<p>Press ▷  .</p> <p><b>NOTES:</b></p> <ul style="list-style-type: none"> <li>When audio is paused, two lights in the center of the light bar glow solid white until audio resumes.</li> <li>You can only play/pause audio when the Bose音乐 app or a <i>Bluetooth</i> connection is your source.</li> </ul>
<b>Skip forward</b>	Press ▷▷.
<b>Skip backward</b>	Press ◀◀.
<b>Volume up</b>	<p>Press +.</p> <p><b>NOTE:</b> To quickly increase the volume, press and hold +.</p>
<b>Volume down</b>	<p>Press —.</p> <p><b>NOTE:</b> To quickly decrease the volume, press and hold —.</p>
<b>Mute/Unmute</b>	<p>Press 🔇.</p> <p>When audio is muted, the left end of the light bar glows solid white until audio resumes.</p> <p><b>TIP:</b> You can also press + to unmute audio.</p>

## ADJUST THE AUDIO

To adjust the bass, treble, center channel, and height channel, use the Bose音乐 app. You can access these options from the Settings menu.

## CONNECT A MOBILE DEVICE

1. On the remote, press the *Bluetooth* button .




The light bar pulses blue.

2. On your mobile device, turn on the *Bluetooth* feature.

**NOTE:** The *Bluetooth* menu is usually found in the Settings menu.

3. Select your soundbar from the device list.

**NOTE:** Look for the name you entered for your soundbar in the Bose音乐 app. If you didn't name your soundbar, the default name appears.

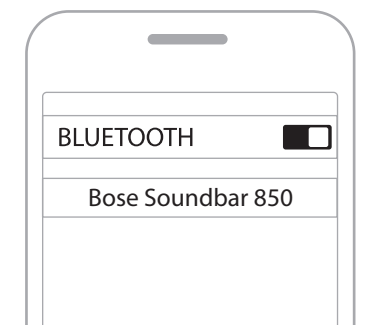


Once connected, you hear a tone, and the light bar glows solid white then fades to black. The soundbar's name appears in the mobile device list.

## DISCONNECT A MOBILE DEVICE

Use the Bose音乐 app to disconnect your mobile device.

**TIP:** You can also use *Bluetooth* settings on your mobile device. Disabling the *Bluetooth* feature disconnects all other devices.

## RECONNECT A MOBILE DEVICE

On the remote, press the *Bluetooth* button .

The soundbar tries to connect with the most recently-connected devices.


### NOTES:

- Make sure the *Bluetooth* feature is enabled on your mobile device.
- The device must be within 30 ft (9 m) and powered on.

## CONNECT AN ADDITIONAL MOBILE DEVICE


You can store up to eight devices in the soundbar device list.

**NOTE:** You can play audio from only one device at a time.

1. On the remote, press and hold  until the light bar pulses blue.
2. On your mobile device, select your soundbar from the device list.

**NOTE:** Make sure the *Bluetooth* feature is enabled on your mobile device.

## CLEAR THE SOUNDBAR DEVICE LIST

1. On the remote, press and hold  for 10 seconds until the light bar pulses white twice then fades to black.

The light bar pulses blue.

2. Delete the soundbar from the *Bluetooth* list on your device.


All devices are cleared, and the soundbar is ready to connect (see page 21).

The soundbar is capable of playing AirPlay 2 audio, which allows you to quickly stream audio from your Apple device to the soundbar or multiple speakers.


**NOTES:**

- To use AirPlay 2, you need an Apple device running iOS 11.4 or later.
- Your Apple device and soundbar must be connected to the same Wi-Fi network.
- For more information about AirPlay, visit: <https://www.apple.com/airplay>


## **STREAM AUDIO FROM THE CONTROL CENTER**

1. On your Apple device, open the Control Center.
2. Tap and hold the audio card in the top-right corner of the screen, then tap the AirPlay icon .
3. Select your soundbar.

## **STREAM AUDIO FROM AN APP**

1. Open a music app (like Apple Music), and select a track to play.
2. Tap .
3. Select your soundbar.

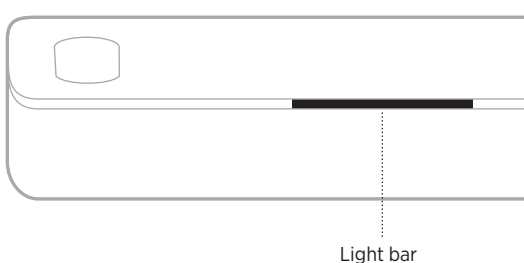

The LED light bar located on the front of the soundbar shows the soundbar status.



**NOTE:** The light bar displays one status at a time of the selected source.





## WI-FI STATUS

Shows the Wi-Fi connection status of the soundbar.

LIGHT BAR ACTIVITY		SYSTEM STATE
Pulsing white		Connecting to Wi-Fi
Solid white then fades to black		Connected to Wi-Fi





## BLUETOOTH STATUS

Shows the *Bluetooth* connection status of mobile devices.

LIGHT BAR ACTIVITY		SYSTEM STATE
Pulsing blue		Ready to connect to mobile device
Pulsing white		Connecting to mobile device
Solid white then fades to black		Connected to mobile device
White light pulses twice then fades to black		Clearing device list







## MEDIA PLAYBACK AND VOLUME STATUS

Shows the soundbar status when controlling media playback and volume.

LIGHT BAR ACTIVITY		SYSTEM STATE
Two center lights glow solid white		Pause
Right end of the light bar pulses white		Volume up
Left end of the light bar pulses white		Volume down
Left end of the light bar glows solid white		Mute

## UPDATE AND ERROR STATUS

Shows the status of software updates and error alerts.

LIGHT BAR ACTIVITY		SYSTEM STATE
Solid amber		Wi-Fi setup in progress
White light slides from right to left		Downloading update
White light slides from left to right		Updating soundbar
Pulses amber 4 times		Source error - refer to the Bose音乐 app
Pulses red 4 times		Request is temporarily unavailable - try again later
Solid red		Error - contact Bose customer service

You can connect any of these accessories to your soundbar.

- **Bose Bass Module 700:** [Bose.com/BM700](https://www.bose.com/BM700)
- **Bose Bass Module 500:** [Bose.com/BM500](https://www.bose.com/BM500)
- **Bose Surround Speakers 700:** [Bose.com/SS700](https://www.bose.com/SS700)

**NOTES:**

- The preferred option is to connect your accessory using the Bose音乐 app.
- You can connect up to two bass modules. To connect, both must be the same model and connected wirelessly.



## CONNECT USING THE BOSE音乐 APP (PREFERRED)

1. Connect your accessory to power. For more information, refer to your accessory owner's guide.
2. In the Bose音乐 app, select your soundbar.
3. Go to the Settings menu to add your accessory.

**NOTES:**

- If the soundbar doesn't connect with the bass module, see "Soundbar doesn't connect to bass module" on page 35.
- If the soundbar doesn't connect with the surround speakers, see "Soundbar doesn't connect to surround speakers" on page 35.

## CONNECT USING THE REMOTE

1. Connect your accessory to power. For more information, refer to your accessory owner's guide.
2. On the remote, press and hold the *Bluetooth* button  and Play/Pause button  for 5 seconds until the light bar pulses white.



Once connected, you hear a tone from the accessory, and the light bar fades to black.

### NOTES:



- If the soundbar doesn't connect with the bass module, see "Soundbar doesn't connect to bass module" on page 35.
- If the soundbar doesn't connect with the surround speakers, see "Soundbar doesn't connect to surround speakers" on page 35.

## CONNECT A BOSE BASS MODULE USING AN AUDIO CABLE


You can connect the bass module to the soundbar using a 3.5 mm audio cable (not provided).

If you don't have a 3.5 mm audio cable (commonly used for headphones and mobile devices), visit [worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850) to purchase a 15 ft (4.5 m) cable. You can also purchase this part at your local electronics store.

1. Connect one end of a 3.5 mm audio cable to the **BASS IN** connector on the bass module.
2. Connect the other end of the cable to the **BASS** connector on the back of the soundbar.

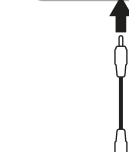

Bose Bass Module 500

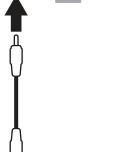

Bose Bass Module 700

3. Check for sound (see page 42).

## CONNECT A BOSE SOUNDLINK *BLUETOOTH* SPEAKER OR BOSE HEADPHONES USING SIMPLESYNC™ TECHNOLOGY

With Bose SimpleSync™ technology, you can connect certain Bose SoundLink *Bluetooth* speakers or Bose headphones to the soundbar for a new way to hear your music and movies.

### Benefits

- **A personal TV listening experience:** Listen to TV without disturbing others by connecting your Bose headphones to the soundbar. Use independent volume controls on each product to lower or mute the soundbar while keeping your headphones as loud as you like.
- **Another room of audio:** Listen to the same song in two different rooms at the same time by connecting your Bose SoundLink *Bluetooth* speaker to the soundbar.

**NOTE:** SimpleSync™ technology has a *Bluetooth* range of up to 30 ft (9 m). Walls and construction materials can affect reception.

### Compatible products

You can connect most Bose SoundLink *Bluetooth* speakers to the soundbar, as well as Bose headphones.

Popular compatible products include:

- Bose SoundLink Revolve+ *Bluetooth* speaker
- Bose SoundLink Mini *Bluetooth* speaker
- Bose SoundLink Color *Bluetooth* speaker
- Bose Noise Cancelling Headphones 700
- Bose QuietComfort 35 wireless headphones

New products are added periodically. For a complete list and more information, visit: [worldwide.bose.com/Support/Groups](https://worldwide.bose.com/Support/Groups)

## Connect using the Bose音乐 app

To connect your Bose SoundLink *Bluetooth* speaker or Bose headphones to the soundbar, use the Bose音乐 app. For more information, visit: [worldwide.bose.com/Support/Groups](https://worldwide.bose.com/Support/Groups)

### NOTES:

- Make sure that the product you're connecting is powered on, within 30 ft (9 m) of the soundbar, and ready to connect to another device. For more information, refer to your product owner's guide.
- You can connect only one product at a time to the soundbar.

## RECONNECT A BOSE SOUNDLINK *BLUETOOTH* SPEAKER OR BOSE HEADPHONES

Power on your Bose SoundLink *Bluetooth* speaker or Bose headphones.

Your speaker or headphones try to connect to the most recently-connected *Bluetooth* device, including the soundbar.

### NOTES:


- The soundbar must be within range (30 ft or 9 m) and powered on.
- If your speaker doesn't connect, see "Soundbar doesn't reconnect to previously-connected Bose headphones" on page 38.
- If your headphones don't connect, see "Soundbar doesn't reconnect to previously-connected Bose headphones" on page 38

## UPDATE THE SOUNDBAR


The soundbar updates automatically when connected to the Bose音乐 app and your Wi-Fi network.

## INSTALL THE REMOTE BATTERIES

1. Slide open the battery compartment cover on the back of the remote.

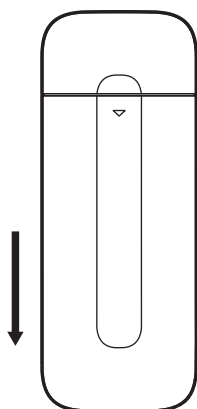

2. Insert the two provided AAA (IEC-LR3) 1.5V batteries. Match the + and — symbols on the batteries with the + and — markings inside the compartment.

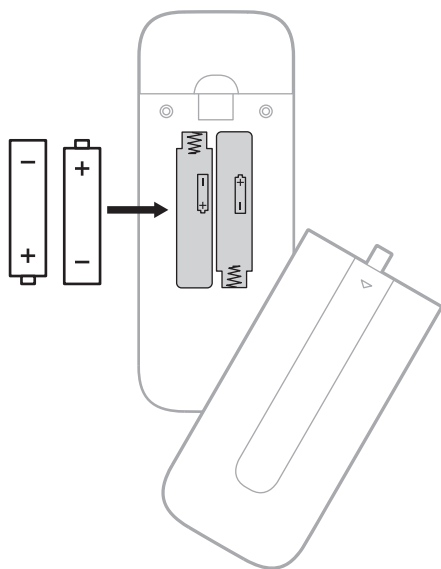

3. Slide the battery compartment cover back into place.

## **CLEAN THE SOUNDBAR**

Wipe the outside surfaces of the soundbar with a soft, dry cloth.

### **CAUTIONS:**

- Do NOT allow liquids to spill onto the soundbar or into any openings.
- Do NOT blow air into the up-firing speakers or soundbar.
- Do NOT use a vacuum to clean the up-firing speakers or soundbar.
- Do NOT use any sprays near the up-firing speakers or soundbar.
- Do NOT use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do NOT allow objects to drop into any openings.

## **REPLACEMENT PARTS AND ACCESSORIES**

Replacement parts and accessories can be ordered through Bose customer service.

Visit: [worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)

## **LIMITED WARRANTY**

The soundbar is covered by a limited warranty. Visit our website at [global.Bose.com/warranty](https://global.Bose.com/warranty) for details of the limited warranty.

To register your product, visit [global.Bose.com/register](https://global.Bose.com/register) for instructions. Failure to register will not affect your limited warranty rights.

## TRY THESE SOLUTIONS FIRST



If you experience problems with the soundbar:


- Make sure the soundbar is connected to a live AC (mains) outlet.
- Secure all cables.
- Check the state of the soundbar (see page 24).
- Download the Bose音乐 app and run available software updates.
- Place the soundbar according to the placement guidelines (see page 11).
- Move the soundbar within the recommended range of your mobile device for proper operation.
- Make sure the soundbar is at least 1 – 3 ft (0.3 – 0.9 m) away from wireless equipment.
- Check that any Wi-Fi access points are placed up to 8 – 10 ft (2.4 – 3.0 m) away from the soundbar, optional bass module, and optional surround speakers.

## OTHER SOLUTIONS


If you could not resolve your issue, see the table below to identify symptoms and solutions to common problems. If you are unable to resolve your issue, contact Bose customer service.


Visit: [worldwide.Bose.com/contact](https://worldwide.Bose.com/contact)

SYMPTOM	SOLUTION
<b>No HDMI eARC port on your TV</b>	Use your TV's HDMI ARC port. Use the optical cable to connect the soundbar to your TV.
<b>No HDMI eARC, HDMI ARC, or optical port on your TV</b>	Connect to your TV using an audio converter and separate audio cable, such as a coaxial, 3.5 mm or analog audio cable (not provided). The type of converter and cable you need depends on the audio output ports available on your TV.
<b>Soundbar doesn't power on</b>	Plug the power cord into a different AC (mains) outlet. Use the remote control to power on the soundbar (see page 17). Unplug the power cords for the soundbar and optional bass module or surround speakers, wait 30 seconds, and plug them firmly into a live AC (mains) outlet.
<b>Soundbar doesn't power off</b>	The soundbar may be in network standby mode. On the remote, press the Power button  to wake the soundbar. Press  again to power off the soundbar.

SYMPTOM	SOLUTION
<b>Audio isn't playing in Dolby Atmos</b>	<p>Check the Bose音乐 app to make sure the audio is streaming in Dolby Atmos. If it's not streaming in Dolby Atmos, make sure the advanced audio settings of your TV is allowing Dolby Atmos to pass through to the soundbar. Refer to your TV owner's guide.</p>
<b>Remote is inconsistent or doesn't work</b>	<p>Match the + and — symbols on the batteries with the + and — markings inside the compartment (see page 31).</p> <p>Replace the batteries (see page 31).</p> <p>Make sure the remote is within operating range (20 ft or 6 m) of the soundbar.</p> <p>Make sure there are no obstructions between the remote and the soundbar.</p>
<b>Intermittent or no audio from soundbar</b>	<p>If the left end of the light bar is glowing solid white, the soundbar is muted. Press the Mute button  to unmute the soundbar.</p> <p>Make sure your mobile device isn't muted.</p> <p>Increase the volume on the soundbar (see page 25) or your mobile device.</p> <p>Switch to a different source (see page 18).</p> <p>Play audio from a different application or music service.</p> <p>If the audio is from a Wi-Fi source, reset the router.</p> <p>Restart your mobile device.</p> <p>Make sure you're using a compatible <i>Bluetooth</i> mobile device.</p> <p>Make sure that the soundbar's HDMI cable is inserted into a port on your TV labeled <b>HDMI eARC</b> (Enhanced Audio Return Channel), not a standard HDMI port. If your TV doesn't have an HDMI eARC port, connect to the HDMI ARC port. If your TV doesn't have an ARC port, connect to the soundbar using the optical cable (see page 42).</p> <p>If the soundbar is connected to your TV's HDMI eARC (or ARC) port, make sure that <b>Consumer Electronics Control (CEC)</b> is enabled in your TV system menu. Your TV may refer to CEC by a different name. Refer to your TV owner's guide.</p> <p>Disconnect the HDMI cable from your TV's HDMI eARC (or ARC) port and reconnect it.</p> <p>Insert the optical cable into a port on your TV labeled <b>Output</b> or <b>OUT</b>, not Input or IN.</p> <p>Unplug the power cords for the soundbar and optional bass module or surround speakers, wait 30 seconds, and plug them firmly into a live AC (mains) outlet.</p> <p>Set CEC to <b>Alternate On</b> using the Bose音乐 app.</p>

SYMPTOM	SOLUTION
<b>Soundbar doesn't connect to bass module</b>	<p>Make sure your bass module is compatible with the soundbar (see page 26).</p> <p>Confirm the status light is blinking amber, indicating that the bass module is ready to connect.</p> <p>Repeat the connection process (see page 26).</p> <p>Unplug the power cords for the soundbar and bass module, wait 30 seconds, and firmly plug them into the AC (mains) outlet.</p> <p>Connect the bass module to the soundbar using a 3.5 mm audio cable (see page 28).</p>
<b>Soundbar doesn't connect to surround speakers</b>	<p>Make sure your surround speakers are compatible with the soundbar (see page 26).</p> <p>Confirm the status light is blinking amber, indicating that the surround speakers are ready to connect.</p> <p>Repeat the connection process (see page 26).</p> <p>Unplug the power cords for the soundbar and surround speakers, wait 30 seconds, and firmly plug them into the AC (mains) outlet.</p>
<b>No audio from bass module or surround speakers</b>	<p>Make sure your bass module or surround speakers are compatible with the soundbar (see page 26).</p> <p>Switch to a different source (see page 18).</p>
<b>Sound is coming from TV speaker</b>	<p>Make sure that the soundbar's HDMI cable is inserted into a port on your TV labeled <b>HDMI eARC</b> (Enhanced Audio Return Channel), not a standard HDMI port. If your TV doesn't have an HDMI eARC port, connect to the HDMI ARC port. If your TV doesn't have an ARC port, connect to the soundbar using the optical cable (see page 42).</p> <p>Disconnect the HDMI cable from your TV's HDMI eARC (or ARC) port and reconnect it.</p> <p>Unplug the power cords for the soundbar and optional bass module or surround speakers, wait 30 seconds, and firmly plug them into the AC (mains) outlet.</p> <p>Turn off your TV speakers. Refer to your TV owner's guide.</p> <p>Decrease your TV volume to its lowest setting.</p> <p>If the soundbar is connected to your TV's HDMI eARC (or ARC) port, make sure that <b>Consumer Electronics Control (CEC)</b> is enabled in your TV system menu. Your TV may refer to CEC by a different name. Refer to your TV owner's guide.</p> <p>Set CEC to <b>Alternate On</b> using the Bose音乐 app.</p>



SYMPTOM	SOLUTION
<b>Poor or distorted audio from soundbar</b>	<p>Test different sources if available.</p> <p>Make sure that your TV can output surround sound audio. Refer to your TV owner's guide.</p> <p>If the audio is being played from another device, reduce the volume of that device.</p> <p>Adjust the bass level using the Bose音乐 app (see page 20).</p> <p>Power off your TV speakers. Refer to your TV owner's guide.</p> <p>Check for sound (see page 43).</p> <p>Run ADAPTiQ audio calibration (see page 15).</p>
<b>Poor or distorted audio from bass module</b>	<p>Test different sources if available.</p> <p>Place your bass module according to the placement guidelines. Refer to your bass module owner's guide (see page 26).</p> <p>Remove all protective films from the bass module.</p> <p>If connected using a 3.5 mm audio cable (not provided), make sure the cable is connected to the <b>BASS</b> connector on the back of the soundbar, not the <b>AUX IN</b> or <b>IR</b> connector.</p>
<b>Poor or distorted audio from surround speakers</b>	<p>Test different sources if available.</p> <p>Place your surround speakers according to the placement guidelines. Refer to your surround speakers owner's guide (see page 26).</p> <p>Make sure that the positive and negative speaker cable wires are securely inserted into the adapters. Firmly insert the adapters into the speakers.</p> <p>If placing the speakers in a cabinet or on a shelf, position them as close as possible to the front edge of the shelf for optimum acoustic performance.</p>
<b>Bass is too heavy or low</b>	<p>Adjust the bass (see page 20).</p> <p>Move the bass module away from nearby walls and corners.</p> <p>Place the bass module according to the placement guidelines. Refer to your bass module owner's guide (see page 26).</p>
<b>Soundbar doesn't play audio from the correct source or selects the incorrect source after a delay</b>	<p>Set CEC to <b>Alternate On</b> using the Bose音乐 app.</p> <p>Disable CEC on your source. Refer to the source owner's guide.</p>
<b>Soundbar and source don't power on/off simultaneously</b>	<p>On the remote, press the source button for the source that is out of sync.</p> <p>Press the Power button  to power on/off the source.</p>

SYMPTOM	SOLUTION
<b>Soundbar doesn't connect to Wi-Fi network</b>	<p>In the Bose音乐 app, select the correct network name, and enter the network password (case-sensitive).</p> <p>Make sure the soundbar and your mobile device are connected to the same Wi-Fi network.</p> <p>If your network information has changed, see page 14.</p> <p>Enable Wi-Fi on the mobile device you are using for setup.</p> <p>Close other open applications on your mobile device.</p> <p>Restart your mobile device and router.</p> <p>If your router supports both 2.4GHz and 5GHz bands, make sure the mobile device and soundbar are connecting to the same band.</p> <p><b>NOTE:</b> Give each band a unique name to make sure you're connecting to the correct band.</p> <p>Unplug the power cords for the soundbar and optional bass module or surround speakers, wait 30 seconds, and firmly plug them into the AC (mains) outlet. Uninstall the Bose音乐 app on your mobile device, reinstall the app, and restart setup.</p> <p>Connect to the network using an Ethernet cable.</p> <p>If connecting to a different network and the app doesn't prompt you for setup, go to the main screen and add the soundbar.</p>
<b>Soundbar doesn't connect with Bluetooth device</b>	<p>On your mobile device, turn the <i>Bluetooth</i> feature off and then on. Delete the soundbar from the <i>Bluetooth</i> list. Connect again (see page 21).</p> <p>Connect a different mobile device (see page 22).</p> <p>Make sure you're using a compatible <i>Bluetooth</i> mobile device.</p> <p>Delete the soundbar from your mobile device <i>Bluetooth</i> list. Connect again (see page 21).</p> <p>Clear the soundbar device list (see page 22). Connect again (see page 21).</p>
<b>Soundbar doesn't stream audio using AirPlay</b>	<p>Make sure your soundbar is powered on and in range (see page 17).</p> <p>Make sure your Apple device and your soundbar are connected to the same Wi-Fi network.</p> <p>Update your Apple device.</p> <p>Make sure the soundbar is up-to-date (see page 31).</p> <p>If you can't find the AirPlay icon  in the music app you are streaming from, stream audio from the Control Center.</p> <p>For additional support, visit: <a href="https://www.apple.com/airplay">https://www.apple.com/airplay</a></p>

SYMPTOM	SOLUTION
<b>Bose音乐 app doesn't work on mobile device</b>	<p>Make sure your mobile device is compatible with the Bose音乐 app and meets minimum system requirements. For more information, refer to the app store on your mobile device.</p> <p>Uninstall the Bose音乐 app on your mobile device then reinstall the app (see page 14).</p>
<b>Soundbar doesn't connect to a Bose SoundLink Bluetooth speaker or Bose headphones</b>	<p>Make sure that your speaker or headphones are powered on, within 30 ft (9 m) of the soundbar, and ready to connect to another device. For more information, refer to your product owner's guide.</p>
<b>Soundbar doesn't reconnect to a previously-connected BoseSoundLink Bluetooth speaker</b>	<p>On your speaker, use the product controls to cycle through the product device list until you hear the name for your soundbar. For product-specific instructions, refer to your speaker owner's guide.</p>
<b>Soundbar doesn't reconnect to previously-connected Bose headphones</b>	<p>Connect using the Bose音乐 app. You can access this option from the Settings menu.</p>
<b>Delayed audio from a connected Bose SoundLink Bluetooth speaker or Bose headphones</b>	<p>Not all Bose SoundLink Bluetooth speakers can play audio in perfect sync when connected to the soundbar. To check if your product is compatible, visit: <a href="https://worldwide.Bose.com/Support/Groups">worldwide.Bose.com/Support/Groups</a></p> <p>Install any available software updates for your speaker or headphones. To check for updates, open the appropriate Bose app for your product on your mobile device or visit <a href="https://btu.Bose.com">btu.Bose.com</a> on your computer.</p>

## RESET THE SOUNDBAR

Factory reset clears all source, volume, network, and ADAPTiQ audio calibration settings from the soundbar and returns it to original factory settings.

1. On the remote, press and hold the Power button  and Skip forward button  for 5 seconds until light bar pulses white twice then fades to black.



The soundbar reboots. When the reset is complete, the light bar glows solid amber.

If you aren't adding the soundbar to your network, reset is complete. If you are adding the soundbar to your network, continue with step 2.

2. To set up the soundbar's network and audio settings:
  - a. Launch the Bose音乐 app on your mobile device and add the soundbar to your network.
  - b. Run ADAPTiQ audio calibration using the Bose音乐 app (see page 15).

## CONNECTION OPTIONS


Connect the soundbar to your TV using one of the following connection options:

- **Option 1 (preferred):** HDMI eARC (Enhanced Audio Return Channel) or ARC
- **Option 2:** Optical

**NOTE:** Using your TV's HDMI eARC port allows you to use your TV remote to control the power, volume, and mute functions of the soundbar.

1. On the back of your TV, locate the **HDMI IN** and **Audio OUT** (optical) ports.

**NOTE:** Your TV port panel may not appear as shown. Look for the shape of the port.

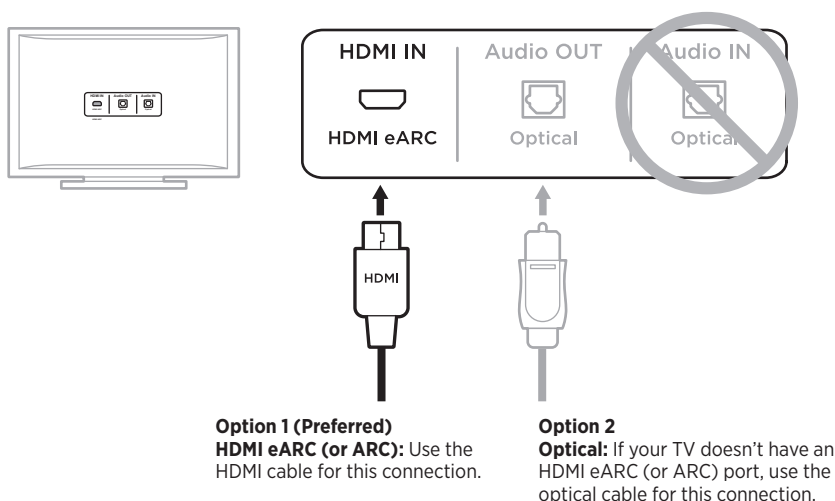

2. Choose an audio cable.

## CONNECT THE SOUNDBAR TO YOUR TV

After choosing an audio cable, connect the soundbar to your TV.

### Option 1 (preferred): HDMI eARC or ARC

1. Insert one end of the HDMI cable into your TV's **HDMI eARC** or **ARC** port.
2. Insert the other end of the cable into the **HDMI (eARC)** port on the soundbar.



## Option 2: Optical

If your TV doesn't have an HDMI eARC (or ARC) port, use the optical cable to connect the soundbar to your TV.

1. Remove the protective cap from both ends of the optical cable.




**CAUTION:** Inserting the plug with the cap attached can damage the plug and/or the port.

2. Insert one end of the optical cable into your TV's **Optical OUT** port.

**CAUTION:** Inserting the plug with the wrong orientation can damage the plug and/or the port.

3. Hold the plug at the other end of the optical cable.
4. Align the plug with the soundbar's **OPTICAL IN** port, and insert the plug carefully.

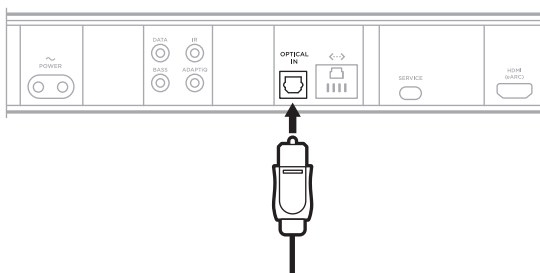

**NOTE:** The port has a hinged door that swings inward when inserting the plug.

5. Firmly push the plug into the port until you hear or feel a click.



## CHECK FOR SOUND

1. Power on your TV.
2. Turn off your TV speakers.

**NOTE:** Refer to your TV owner's guide for more information.

3. If you are using a cable/satellite box or other secondary source:
  - a. Power on this source.
  - b. Select the appropriate TV input.
4. Power on the soundbar (see page 17).

You hear sound coming from the soundbar.

5. On the remote, press the Mute button .

You don't hear sound coming from the TV speakers or soundbar.

**NOTE:** If you hear sound coming from your TV after your soundbar is muted, see "Sound is coming from TV speaker" on page 35.

## 请阅读并保留所有安全、安全性和使用说明。

### 重要安全说明

请阅读这些说明。

请仅用干布进行清洁。

请勿堵塞任何通风口。请按照制造商的说明安装。

请勿安装在任何热源旁，例如暖气片、热调节装置、火炉或可产生热量的其他设备（包括扩音器）。

只能使用制造商指定的附件/配件。

任何维修事宜均请向合格的人员咨询。如果设备有任何损坏，均需进行维修，例如电源线或插头受损、液体溅入或物体落入设备内、设备受雨淋或受潮、不能正常工作或跌落。

### 警告/小心



此符号表示产品外壳内存在未绝缘的危险电压，可能会造成触电危险。



此符号表示产品指南中提供了重要的操作和维护说明。



包含小部件，可能会导致窒息。不适合 3 岁以下的儿童使用。




本产品含有磁性材料。关于是否会影响可植入医疗设备的情况，请咨询医生。



本产品含有钢化玻璃表面。请小心使用以避免撞击。如果破损，请小心处理破碎的玻璃。

- 为降低火灾或触电危险，切勿将本产品暴露在雨中、液体中或湿气中。
- 本产品不得受液体淋溅或喷洒，不得将装有液体的物体（如花瓶等）置于本产品上或本产品附近。
- 请将本产品放置到远离火源和热源的地方。请勿将明火火源（如点燃的蜡烛）置于本产品上或靠近本产品。
- 未经授权切勿改装本产品。
- 请勿将本产品与逆变器配合使用。
- 请勿在汽车或船舶上使用本产品。
- 如果将电源插头或设备耦合器作为断路设备，那么此类断路设备应当保持可随时恢复工作的状态。
- 只能使用以下硬件安装本产品：Bose 条形音箱壁挂架。
- 放置产品时，请确保它没有阻塞电视或显示器上的任何通风孔。请参阅电视或显示器随附的用户指南，并按照制造商的说明进行安装。
- 由于有通风需求，Bose 不推荐将本产品放置在有限的空间中，比如墙洞或封闭式橱柜。
- 请勿让儿童接触电池。
- 如果处理不当，电池可能导致着火或化学灼伤。请勿对其进行充电、拆解、加热或焚化。

## 中国危险物质限用表

有毒或有害物质或元素的名称及成分						
	有毒或有害物质和元素					
零件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴化联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	X	0	0	0	0	0
金属零件	X	0	0	0	0	0
塑料零件	0	0	0	0	0	0
扬声器	X	0	0	0	0	0
连接线	X	0	0	0	0	0
此表格符合 SJ/T 11364 条款。 0：表示此零件中所有同类物质包含的有毒或有害物质低于 GB/T 26572 中的限定要求。 X：表示此零件使用的同类物质中至少有一种包含的有毒或有害物质高于 GB/T 26572 中的限定要求。						

**生产日期：**序列号中第八位数字表示生产年份；“1”表示 2011 年或 2021 年。

**中国进口商：**Bose 电子（上海）有限公司，上海市闵行区顾戴路 2337 号丰树商业城塔楼 D 第 6 层（邮编：201100）

**输入额定值：**100 - 240V ~ 50/60Hz, 65W

CMIT ID 位于条形音箱背面的产品标签上。

### 安全性信息



本产品能够接收由 Bose 提供的自动安全性更新。要接收自动安全性更新，您必须完成 Bose 音乐应用中的产品设置流程并将产品连接至互联网。如果您没有完成设置流程，您需要自行安装 Bose 届时提供的安全性更新。

Apple、Apple 徽标、Apple Music 以及 AirPlay 是 Apple Inc. 在美国和其他国家注册的商标。App Store 是 Apple Inc. 的服务标志。

使用“Apple 专用”标记表示此附件的设计专门用来与标记中认定的技术配合使用，并且通过了开发商的认证，符合 Apple 的性能标准。

Bluetooth® 文字标记和徽标是由 Bluetooth SIG, Inc. 所拥有的注册商标，Bose 公司根据许可规定使用上述标记。



Dolby、Dolby Atmos 和双 D 符号是 Dolby Laboratories Licensing Corporation 的商标。经 Dolby Laboratories 许可制造。保密未公开的作品。版权所有 © 2012-2020 Dolby Laboratories。保留所有权利。

Android 是 Google LLC. 的商标。



HDMI、HDMI High-Definition Multimedia Interface 和 HDMI 徽标是 HDMI Licensing Administrator, Inc. 的商标或注册商标。



此产品受 Microsoft 特定知识产权的保护。未经 Microsoft 许可，禁止在本产品范围外使用或传播此技术。

Wi-Fi 是 Wi-Fi Alliance® 的注册商标。

ADAPTiQ、Bose、Bose Bass Module、Bose Noise Cancelling Headphones、Bose Soundbar、Bose Soundbar Wall Bracket、Bose Surround Speakers、QuietComfort、SimpleSync、SoundLink 和 SoundLink Revolve 是 Bose Corporation 的商标。

©2022 Bose Corporation。未经事先书面许可，不得复制、修改、发行或以其他方式使用本资料的任何部分。

要查看作为 Bose Soundbar 850 产品的组件随附的第三方软件包的许可披露：

1. 按住遥控器上的 *Bluetooth* 按钮  和“快退”按钮  5 秒钟。
2. 将一条 USB 线缆连接到条形音箱背面的 SERVICE 连接器。
3. 将连接线的另一端连接到计算机。
4. 在计算机的浏览器窗口中输入 <http://203.0.113.1/opensource> 即可显示 EULA 和许可披露。

## 装箱单

内件 .....	9
----------	---

<b>DOLBY ATMOS® 技术</b> .....	10
------------------------------	----

## 条形音箱放置

建议 .....	11
墙式安装条形音箱 .....	12
调整音频以符合壁挂要求 .....	12

## 设置条形音箱

将条形音箱连接到电源 .....	13
网络待机 .....	13

## BOSE音乐应用设置

下载 Bose音乐应用 .....	14
连接到其他 Wi-Fi 网络或从网络中移除 .....	14

## ADAPTiQ 音频校准

运行 ADAPTiQ 音频校准 .....	15
-----------------------	----

## 条形音箱控件

遥控器功能 .....	16
打开/关闭电源 .....	17
自动唤醒（仅限光纤连接） .....	17
音频源 .....	18
媒体播放和音量 .....	19
调整音量 .....	20

## **BLUETOOTH® 连接**

连接移动设备 .....	21
断开移动设备 .....	22
重新连接移动设备 .....	22
连接其他移动设备 .....	22
清空条形音箱设备列表 .....	22

## **使用 AIRPLAY 流传输音频**

从“控制中心”流传输音频 .....	23
从应用流传输音频 .....	23

## **条形音箱状态**

Wi-Fi® 状态 .....	24
Bluetooth 状态 .....	24
媒体播放和音量状态 .....	25
更新和错误状态 .....	25

## **连接 BOSE 产品**

使用 Bose 音乐应用连接（首选） .....	26
使用遥控器连接 .....	27
使用音频连接线连接 Bose 低音箱 .....	28
使用 SimpleSync™ 技术连接 Bose SoundLink Bluetooth 扬声器或 Bose 耳机 .....	29
优势 .....	29
兼容产品 .....	29
使用 Bose 音乐应用连接 .....	30
重新连接 Bose SoundLink Bluetooth 扬声器或 Bose 耳机 .....	30

## 维护与保养

更新条形音箱 .....	31
安装遥控器电池 .....	31
清洁条形音箱 .....	32
更换零件和配件 .....	32
有限质保 .....	32

## 故障排除

首先尝试这些解决方案 .....	33
其他解决方案 .....	33

## 附录：设置参考


重置条形音箱 .....	39
连接选项 .....	40
将条形音箱连接到电视 .....	41
选项 1（优先）：HDMI eARC 或 ARC .....	41
选项 2：光纤 .....	42
检查声音效果 .....	43

## 内件


请确认包装箱中内含以下部件：




Bose Soundbar 850




遥控器




AAA 电池 (2)



电源线



HDMI 连接线



光缆



ADAPTiQ 耳机


**注意：**如果产品的任何部分损坏或条形音箱的玻璃破损，请勿使用。请联系 Bose 授权经销商或 Bose 客户服务处。

请访问：[worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)


Bose Soundbar 850 支持 Dolby Atmos® 技术。条形音箱使用额外的向上扬声器来提供全方向的高音质，实现一流、完全包围的沉浸式环绕声体验。

## 建议

- 将条形音箱放在电视机下方和前面（最佳），或放在电视上方，使条形音箱前侧朝向房间。
- 为获得最佳音质，请确保条形音箱（向上扬声器）顶部的扬声器没有被遮挡。
- 将条形音箱安装在墙壁上时，请确保条形音箱的顶部距离电视至少有 10 cm 的距离。
- 如果将条形音箱放在架子或电视架上，一定要使条形音箱前侧尽量靠近架子或支架前沿以获得最佳音质。
- 将条形音箱放于金属柜之外并远离金属柜、其他音频/视频组件和直接热源。
- 将条形音箱放在橡胶底座上并置于稳定的水平表面。为保证适当支撑，两个支脚都必须靠在表面上。振动会导致条形音箱移动，尤其在光滑表面（大理石、玻璃或高度抛光的木材）上，这种情况特别突出。
- 条形音箱后侧距离任何其他表面至少要有 1 cm 的距离。堵塞这一侧的端口会影响音质。
- 确保附近有交流（市电）插座。
- 为了避免无线干扰，应使其他无线设备远离条形音箱至少 0.3 - 0.9 m。
- 为避免无线干扰，某些 Wi-Fi 接入点可能需要放在距离条形音箱、选配的低音箱和选配的环境扬声器 2.4 - 3.0 m 以外的地方。
- 为了获得最佳音质，请勿将条形音箱放置于封闭式橱柜或斜放在角落。
- 请勿在条形音箱上放置任何物品。

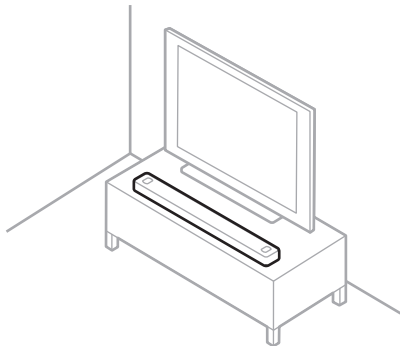

**小心：**在使用时请勿将条形音箱正面、背面或顶部朝下。

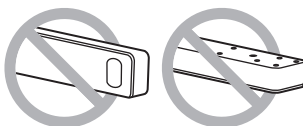


## 墙式安装条形音箱

您可以在墙壁上安装条形音箱。要购买 Bose 条形音箱壁挂架，请联系授权的 Bose 经销商。

请访问：[worldwide.Bose.com/Support/SB850](http://worldwide.Bose.com/Support/SB850)

**注意：**请确保条形音箱的顶部距离电视至少有 10 cm 的距离。

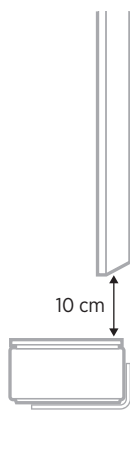

**小心：**不要使用任何其他硬件安装条形音箱。


## 调整音频以符合壁挂要求

安装条形音箱后，请务必运行 ADAPTiQ（请参见第 15 页）。

**注意：**从墙上取下条形音箱时，请再次运行 ADAPTiQ。

## 将条形音箱连接到电源

1. 将电源线连接到条形音箱背面的 POWER 端口。
2. 将电源线的另一端插入交流（市电）电源插座。

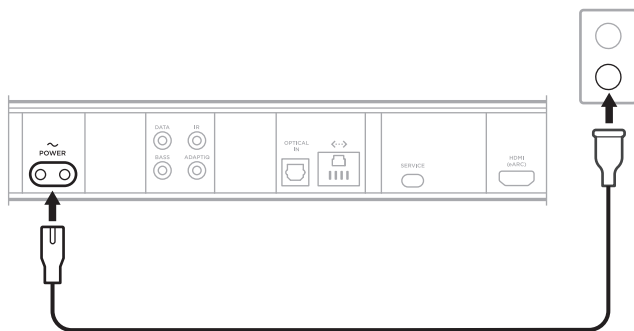


条形音箱电源随即打开，灯柱呈琥珀色亮起。

## 网络待机

音频停止且 20 分钟没有按任何按钮后，条形音箱将切换至网络待机状态。

要从网络待机状态唤醒条形音箱：

- 按下遥控器上的“电源”按钮  或音频源按钮（请参见第 18 页）。
- 使用移动设备或 Bose 音乐应用播放或恢复音频。

**注意：**您可以使用 Bose 音乐应用来禁用待机计时器。您可以从“设置”菜单中访问此选项。

您可在任何移动设备（例如智能手机或平板）上通过 Bose 音乐应用设置和控制条形音箱。

您可以使用此应用了解如何设置条形音箱和附件、管理条形音箱设置、选择自己的语音提示语言、了解正在播放信息和获取新功能。

## 下载 BOSE 音乐应用

1. 在移动设备上，下载 Bose 音乐应用。



2. 请按照应用说明执行操作。

## 连接到其他 WI-FI 网络或从网络中移除

如果您的网络名称或密码已更改、您想连接到其他网络，或者您想从网络中移除条形音箱，那么您必须重置条形音箱（请参见第 39 页）。

使用 Bose 音乐应用设置条形音箱后，应用会提示您运行 ADAPTiq 音频校准以获得最佳音质。ADAPTiq 音频校准通过在房间中的多个位置进行音频测量来根据您收听区域的音响效果定制系统声音。要运行音频校准，需要让房间安静 10 分钟。

在 ADAPTiq 音频校准期间，ADAPTiq 耳机顶部的麦克风（随条形音箱提供）测量房间的声音特性以确定最佳音质。

## 运行 ADAPTiq 音频校准

如果您以后再连接选配的低音箱或环绕扬声器、移动了条形音箱或移动了任何家具，请再次运行 ADAPTiq 音频校准以保证最佳音质。


要运行 ADAPTiq 音频校准，请使用 Bose 音乐应用。您可以从“设置”菜单中访问此选项。

条形音箱控件位于条形音箱顶部和遥控器上。


**提示：**您还可以使用 Bose 音乐应用控制条形音箱。

## 遥控器功能

使用遥控器控制条形音箱和 *Bluetooth* 连接。

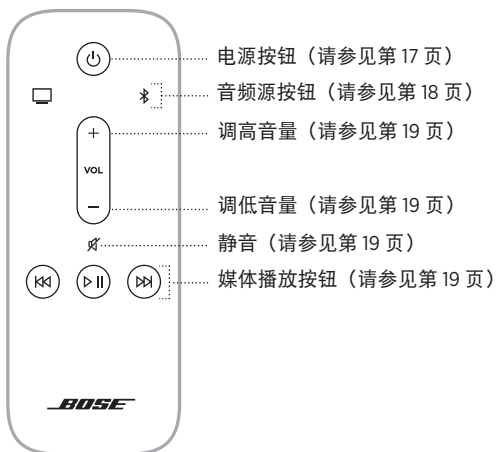

## 打开/关闭电源

按下遥控器上的“电源”按钮  以打开/关闭条形音箱。




打开电源后，条形音箱会默认连接上次活动的音频源。

**注意：**将条形音箱插入交流（市电）插座后，条形音箱会自动打开。

## 自动唤醒（仅限光纤连接）

您可将条形音箱设置为只要收到声音信号便自动打开。

要在自动唤醒与默认电源设置之间切换，请按住  按钮 10 秒钟，直至听到提示音且灯柱呈白色光闪烁两次。

**提示：**您还可以使用 Bose 音乐应用控制自动唤醒。您可以从“设置”菜单中访问此选项。

## 音频源


您可使用遥控器控制电视和 *Bluetooth* 连接。

要选择音频源，按下遥控器上相应的按钮（电视  或 *Bluetooth* ）。



**提示：**您还可以使用 Bose 音乐应用选择音频源。

## 媒体播放和音量

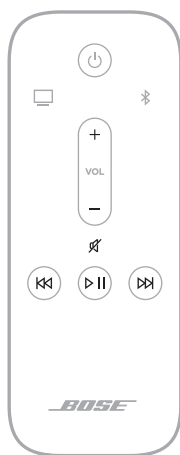


功能	操作方法
播放/暂停	<p>按下 ▷  。</p> <p><b>注意：</b></p> <ul style="list-style-type: none"> <li>将音频暂停后，灯柱中央的两个灯会常亮，直到音频恢复。</li> <li>您只能在 Bose 音乐应用或 <i>Bluetooth</i> 连接是音频源时播放/暂停音频。</li> </ul>
快进	按下 ▷▷。
快退	按下 ◀◀。
调高音量	<p>按下 +。</p> <p><b>注意：</b>要快速提高音量，按住 +。</p>
调低音量	<p>按下 -。</p> <p><b>注意：</b>要快速降低音量，按住 -。</p>
静音/取消静音	<p>按下 𐄂。</p> <p>将音频静音后，灯柱的左端会常亮，直到音频恢复。</p> <p><b>提示：</b>您还可以按下 + 以取消音频静音。</p>

## 调整音量

要调整低音、高音、中置声道和高置声道，请使用 Bose 音乐应用。您可以从“设置”菜单中访问这些选项。

## 连接移动设备

1. 按下遥控器上的 *Bluetooth* 按钮 .




灯柱呈蓝色闪烁。

2. 打开移动设备上的 *Bluetooth* 功能。

**注意：** *Bluetooth* 菜单通常在“设置”菜单中。

3. 在设备列表中选择条形音箱。

**注意：** 在 Bose 音乐应用中查找您为条形音箱输入的名称。如果没有为条形音箱命名，将显示默认名称。

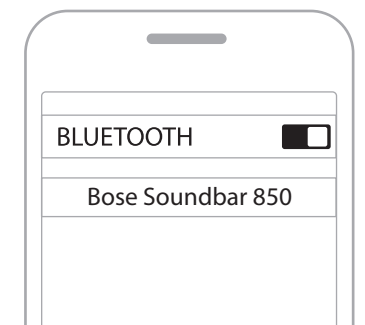

连接后，您会听到提示音，灯柱常亮，然后变暗。条形音箱名称显示在移动设备列表中。

## 断开移动设备

使用 Bose 音乐应用以断开移动设备。

**提示：**您也可在移动设备上使用 *Bluetooth* 设置。禁用 *Bluetooth* 功能后，所有其他设备连接都将断开。

## 重新连接移动设备

按下遥控器上的 *Bluetooth* 按钮 .

条形音箱尝试连接最近连接的设备。


**注意：**

- 请确保您的移动设备已启用 *Bluetooth* 功能。
- 设备必须在 9 m 的连接范围内且已打开电源。

## 连接其他移动设备


条形音箱的设备列表最多可以保存八台设备。

**注意：**一次只能播放一台设备的音频。

1. 按住遥控器上的 *Bluetooth* 按钮 , 直到灯柱呈蓝色闪动。
2. 从移动设备的设备列表中选择条形音箱。

**注意：**请确保您的移动设备已启用 *Bluetooth* 功能。

## 清空条形音箱设备列表

1. 按住遥控器上的  按钮 10 秒钟，直到灯柱呈白色闪动两次，然后逐渐变暗。  
灯柱呈蓝色闪烁。
2. 从设备上的 *Bluetooth* 列表中删除条形音箱。


所有设备已被清除，并且条形音箱已准备好连接（请参见第 21 页）。

条形音箱能够播放 AirPlay 2 音频，这样您可以快速将 Apple 设备的音频流传输到条形音箱或多个扬声器。


**注意：**

- 要使用 AirPlay 2，您需要一台运行 iOS 11.4 或更高版本的 Apple 设备。
- Apple 设备和条形音箱必须连接到同一个 Wi-Fi 网络中。
- 关于 AirPlay 的信息，请访问：<https://www.apple.com/airplay>


## 从“控制中心”流传输音频

1. 在 Apple 设备上，打开“控制中心”。
2. 点击并按住屏幕右上角的声卡，然后点击 AirPlay 图标 。
3. 选择条形音箱。

## 从应用流传输音频

1. 打开音乐应用（如 Apple Music）并选择要播放的曲目。
2. 点击 .
3. 选择条形音箱。

条形音箱正面的 LED 灯柱显示条形音箱状态。

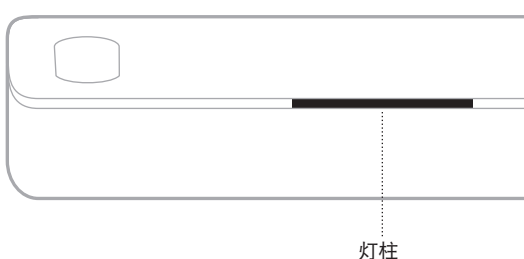

**注意：**灯柱每次显示所选音频源的一个状态。

## WI-FI 状态

显示条形音箱的 Wi-Fi 连接状态。

灯柱活动		系统状态
呈白色闪动		正在连接至 Wi-Fi
呈白色常亮，然后变暗		已连接至 Wi-Fi

## BLUETOOTH 状态

显示移动设备的 *Bluetooth* 连接状态。

灯柱活动		系统状态
呈蓝色闪动		准备连接到移动设备
呈白色跳动		正在连接移动设备
呈白色常亮，然后变暗		已连接至移动设备
呈白色闪动两次，然后变暗		清除设备列表







## 媒体播放和音量状态

控制媒体播放和音量时显示条形音箱状态。

灯柱活动		系统状态
两个中间灯呈常亮白色亮起		暂停
灯柱右端呈白色闪动		调高音量
灯柱左端呈白色闪动		调低音量
灯柱左端呈白色常亮		静音

## 更新和错误状态

显示软件更新和错误提醒的状态。

灯柱活动		系统状态
琥珀色光常亮		正在设置 Wi-Fi
白色光从右向左滑动		正在下载更新
白色光从左向右滑动		正在更新条形音箱
呈琥珀色光 4 次闪动		音频源错误 —— 参见 Bose 音乐应用
呈红色光 4 次闪动		暂时无法提交请求 —— 请稍后重试
呈红色光常亮		错误 —— 联系 Bose 客户服务处

您可将以下任意附件连接到您的条形音箱。

- **Bose Bass Module 700:** [Bose.com/BM700](https://Bose.com/BM700)
- **Bose Bass Module 500:** [Bose.com/BM500](https://Bose.com/BM500)
- **Bose Surround Speakers 700:** [Bose.com/SS700](https://Bose.com/SS700)

**注意:**

- 首选选项是使用 Bose 音乐应用连接您的附件。
- 您最多可以连接两个低音箱。要连接，两者必须是相同的型号并采用无线方式连接。



## 使用 BOSE 音乐应用连接（首选）

1. 将附件连接到电源。有关更多信息，请参阅附件的用户指南。
2. 在 Bose 音乐应用中，选择您的条形音箱。
3. 转到“设置”菜单以添加您的附件。

**注意:**

- 如果条形音箱未连接低音箱，请参见第 35 页上的“条形音箱无法连接到低音箱”。
- 如果条形音箱未连接环绕扬声器，请参见第 35 页上的“条形音箱无法连接到环绕扬声器”。

## 使用遥控器连接

1. 将附件连接到电源。有关更多信息，请参阅附件的用户指南。
2. 按住遥控器上的 *Bluetooth* 按钮  和“播放/暂停”按钮  5 秒钟，直到灯柱呈白色闪动。



连接后，您会听到附件发出的提示音，然后灯柱逐渐变暗。

### 注意：


- 如果条形音箱未连接低音箱，请参见第 35 页上的“条形音箱无法连接到低音箱”。
- 如果条形音箱未连接环绕扬声器，请参见第 35 页上的“条形音箱无法连接到环绕扬声器”。

## 使用音频连接线连接 BOSE 低音箱

您可以使用 3.5 mm 音频连接线（未提供）将低音箱连接到条形音箱。

如果您没有 3.5 mm 音频连接线（耳机和移动设备上的常用连接线），请访问 [worldwide.Bose.com/Support/SB850](http://worldwide.Bose.com/Support/SB850) 来购买 4.5 m 连接线。您也可以在当地电器商店购买此连接线。

1. 将 3.5 mm 音频连接线的一端连接至低音箱背面的 **BASS IN** 连接器。
2. 将音频连接线的另一端连接至条形音箱背面的 **BASS** 连接器。



Bose Bass Module 500



Bose Bass Module 700

3. 检查声音效果（请参见第 42 页）

## 使用 SIMPLESYNC™ 技术连接 BOSE SOUNDLINK BLUETOOTH 扬声器或 BOSE 耳机

使用 Bose SimpleSync™ 技术，您可以将某些 Bose SoundLink *Bluetooth* 扬声器或 Bose 耳机连接到条形音箱，以一种新的方式聆听音乐和电影。

### 优势

- **个人电视聆听体验：**将 Bose 耳机连接到条形音箱，在不干扰他人的情况下聆听电视。使用每个产品上的独立音量控制，在降低条形音箱的音量或使之静音的同时，将耳机的音量保持在自己希望的水平。
- **另一个房间的音频：**通过将您的 Bose SoundLink *Bluetooth* 扬声器连接到条形音箱，即可在两间不同的房间同时收听同一首歌曲。

**注意：**SimpleSync™ 技术的 *Bluetooth* 连接范围为 9 m。墙壁和建筑材料可能会影响信号接收。

### 兼容产品

您可以将大多数 Bose SoundLink *Bluetooth* 扬声器连接到条形音箱以及 Bose 耳机。

受欢迎的兼容产品包括：

- Bose SoundLink Revolve+ *Bluetooth* 扬声器
- Bose SoundLink Mini *Bluetooth* 扬声器
- Bose SoundLink Color *Bluetooth* 扬声器
- Bose Noise Cancelling Headphones 700
- Bose QuietComfort 35 无线耳机

将定期添加新产品。如果需要完整列表和更多信息，请访问：  
[worldwide.Bose.com/Support/Groups](http://worldwide.Bose.com/Support/Groups)

## 使用 Bose 音乐应用连接

要将您的 Bose SoundLink *Bluetooth* 扬声器或 Bose 耳机连接到条形音箱，使用 Bose 音乐应用。有关更多信息，请访问：[worldwide.Bose.com/Support/Groups](http://worldwide.Bose.com/Support/Groups)

### 注意：

- 确保您要连接的产品已通电，距离条形音箱 9 m 以内，并已准备好连接到其他设备。有关更多信息，请参阅产品的用户指南。
- 一次只能将一个产品连接到条形音箱。

## 重新连接 BOSE SOUNDLINK *BLUETOOTH* 扬声器或 BOSE 耳机

打开 Bose SoundLink *Bluetooth* 扬声器或 Bose 耳机的电源。

您的扬声器或耳机尝试连接到最近连接的 *Bluetooth* 设备，包括条形音箱。

### 注意：


- 条形音箱必须在连接范围 (9 m) 内并已通电。
- 如果扬声器未连接，请参见第 38 页上的“条形音箱无法重新连接到之前连接的 Bose 耳机”。
- 如果耳机未连接，请参见第 38 页上的“条形音箱无法重新连接到之前连接的 Bose 耳机”。

## 更新条形音箱


当连接到 Bose 音乐应用和 Wi-Fi 网络时，条形音箱会自动更新。

## 安装遥控器电池

1. 滑开遥控器背面的电池仓盖。

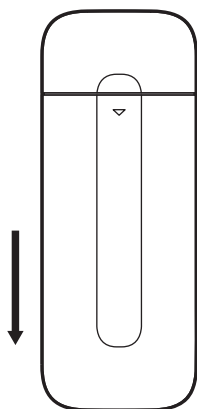

2. 插入随附的两节 AAA (IEC-LR3) 1.5 V 电池。将电池上的 + 和 - 符号与电池盒内的 + 和 - 标记相对应。

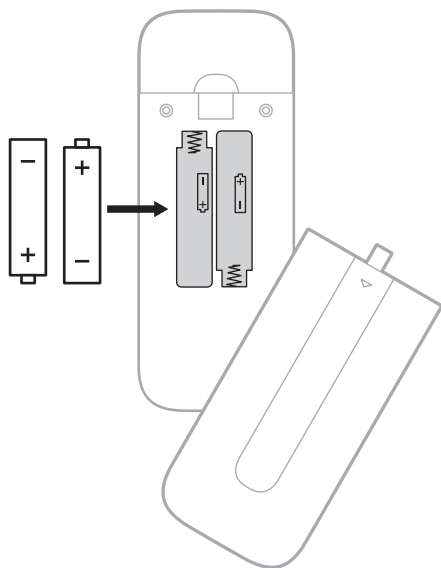

3. 将电池仓盖滑回原位。

## 清洁条形音箱

请使用柔软的干布擦拭条形音箱外表面。

### 小心：

- 切勿让液体溅入条形音箱或任何开口。
- 请勿将空气吹入向上扬声器或条形音箱。
- 请勿使用吸尘器清洁向上扬声器或条形音箱。
- 请勿在向上扬声器或条形音箱附近使用喷雾剂。
- 请勿使用任何溶剂、化学品或含酒精、氨水、研磨剂的清洁剂。
- 请勿让物体落入任何开口中。

## 更换零件和配件

可通过 Bose 客户服务处订购更换零件或配件。

请访问：[worldwide.Bose.com/Support/SB850](http://worldwide.Bose.com/Support/SB850)

## 有限质保

本条形音箱享有有限质保。有关有限质保的详细信息，请访问我们的网站：[global.Bose.com/warranty](http://global.Bose.com/warranty)。

要注册您的产品，请访问 [global.Bose.com/register](http://global.Bose.com/register) 以获取说明。未进行注册并不影响您的有限质保权利。

## 首先尝试这些解决方案



如果条形音箱出现问题：


- 确保条形音箱插入了通电的交流（市电）插座中。
- 接好所有连接线。
- 检查条形音箱的状态（请参见第 24 页）。
- 下载 Bose 音乐应用并运行可用的软件更新。
- 按照放置原则放置条形音箱（请参见第 11 页）。
- 将条形音箱移到移动设备的建议连接范围内，以确保其能够正常工作。
- 请将条形音箱与无线设备保持至少 0.3 – 0.9 m 的距离。
- 检查 Wi-Fi 接入点是否在距离条形音箱、选配的低音箱和选配的环境扬声器 2.4 – 3.0 m 以外的地方。

## 其他解决方案

若无法解决问题，请参见下表了解常见问题的症状和解决方案。若仍然无法解决问题，请联系 Bose 客户服务处。

请访问：[worldwide.Bose.com/contact](https://worldwide.Bose.com/contact)

症状	解决方案
电视上无 HDMI eARC 端口	使用电视的 HDMI ARC 端口。 使用光缆将条形音箱连接到电视。
电视上无 HDMI eARC、HDMI ARC 或光纤端口	使用音频转换器和独立的音频连接线连接电视，例如共轴、3.5 mm 或模拟音频连接线（未提供）。您需要的转换器和连接线的类型取决于您的电视上可以使用的音频输出端口。
条形音箱无法开机	将电源线插入另一个交流（市电）插座中。 使用遥控器开启条形音箱（请参见第 17 页）。 拔出条形音箱和选配低音箱或环境扬声器的电源线，等待 30 秒，然后再将其牢固插入交流（市电）插座中。
条形音箱无法关机	条形音箱可能处于网络待机模式。按下遥控器上的“电源”按钮  以唤醒条形音箱。再次按下  以关闭条形音箱。

症状	解决方案
无法使用 Dolby Atmos 播放音频	<p>检查 Bose 音乐 App 以确保音频是以 Dolby Atmos 传输。如果不是以 Dolby Atmos 传输，确保电视的高级音频设置允许 Dolby Atmos 向条形音箱传输音频。请参阅电视用户指南。</p>
遥控器不稳定或失灵	<p>将电池上的 + 和 - 符号与电池盒内的 + 和 - 标记相对应 (请参见第 31 页)。</p> <p>更换电池 (请参见第 31 页)。</p> <p>确保遥控器在条形音箱的工作范围 (6 m) 内。</p> <p>确保遥控器和条形音箱之间没有障碍物。</p>
条形音箱的音频断断续续或无音频	<p>如果灯柱左端成白色常亮，则条形音箱已静音。按下“静音”按钮  以取消条形音箱的静音。</p> <p>确保您的移动设备未静音。</p> <p>提高条形音箱 (请参见第 25 页) 或移动设备的音量。</p> <p>切换至其他音频源 (请参见第 18 页)。</p> <p>使用不同应用或音乐服务播放音频。</p> <p>如果音频来自 Wi-Fi 音频源，请重置路由器。</p> <p>重启移动设备。</p> <p>确保您使用的是兼容 <i>Bluetooth</i> 的移动设备。</p> <p>确保条形音箱的 HDMI 连接线已插入电视上标示为 <b>HDMI eARC</b> (增强音频回传通道) 的端口，而不是标准 HDMI 端口。如果您的电视没有 HDMI eARC 端口，请连接到 HDMI ARC 端口。如果您的电视没有 ARC 端口，请使用光缆连接条形音箱 (请参见第 42 页)。</p> <p>如果条形音箱已连接到电视的 HDMI eARC 或 ARC 接口，请确保已启用电视系统菜单中的 <b>Consumer Electronics Control (CEC)</b> (消费电子产品控制)。您的电视上的 CEC 可能使用其他的名称。请参阅电视用户指南。</p> <p>从电视的 HDMI eARC (或 ARC) 端口上断开 HDMI 连接线并重新连接。</p> <p>将光缆插入电视上标示为 <b>Output</b> 或 <b>OUT</b> 的端口，而非 <b>Input</b> 或 <b>IN</b> 端口。</p> <p>拔出条形音箱和选配低音箱或环绕扬声器的电源线，等待 30 秒，然后再将其牢固插入交流 (市电) 插座中。</p> <p>使用 Bose 音乐应用将 CEC 设置为 <b>交替开启</b>。</p>

症状	解决方案
条形音箱无法连接到低音箱	<p>确保您的低音箱与扬声器兼容（请参见第 26 页）。          确认状态指示灯呈琥珀色闪烁，表明低音箱已准备好连接。          重复连接流程（请参见第 26 页）。          拔出条形音箱和低音箱的电源线，等待 30 秒，然后再将其牢固地插入交流（市电）插座中。          使用 3.5 mm 音频连接线将低音箱连接到条形音箱（请参见第 28 页）。</p>
条形音箱无法连接到环绕扬声器	<p>确保您的环绕扬声器与条形音箱兼容（请参见第 26 页）。          确认状态指示灯呈琥珀色闪烁，表明环绕扬声器已准备好连接。          重复连接流程（请参见第 26 页）。          拔出条形音箱和环绕扬声器的电源线，等待 30 秒，然后再将其牢固地插入交流（市电）插座中。</p>
低音箱或环绕扬声器无音频	<p>确保低音箱或环绕扬声器与条形音箱兼容（请参见第 26 页）。          切换至其他音频源（请参见第 18 页）。</p>
声音来自电视扬声器	<p>确保条形音箱的 HDMI 连接线已插入电视上标示为 <b>HDMI eARC</b>（增强音频回传通道）的端口，而不是标准 HDMI 端口。如果您的电视没有 HDMI eARC 端口，请连接到 HDMI ARC 端口。如果您的电视没有 ARC 端口，请使用光缆连接条形音箱（请参见第 42 页）。          从电视的 HDMI eARC（或 ARC）端口上断开 HDMI 连接线并重新连接。          拔出条形音箱和选配低音箱或环绕扬声器的电源线，等待 30 秒，然后再将其牢固地插入交流（市电）插座中。          关闭电视扬声器。请参阅电视用户指南。          将电视音量降到最低。          如果条形音箱已连接到电视的 HDMI eARC 或 ARC 接口，请确保已启用电视系统菜单中的 <b>Consumer Electronics Control (CEC)</b>（消费电子产品控制）。您的电视上的 CEC 可能使用其他的名称。请参阅电视用户指南。          使用 Bose 音乐应用将 CEC 设置为 <b>交替开启</b>。</p>



症状	解决方案
条形音箱的音质差或失真	<p>测试不同的音频源（若有）。</p> <p>确保您的电视可输出环绕立体声音频。请参阅电视用户指南。</p> <p>如果播放的声音来自另一台设备，请降低该设备的音量。</p> <p>使用 Bose 音乐应用调整低音音量（请参见第 20 页）。</p> <p>关闭电视扬声器。请参阅电视用户指南。</p> <p>检查声音效果（请参见第 43 页）</p> <p>运行 ADAPTiQ 音频校准（请参见第 15 页）。</p>
低音箱的音质差或失真	<p>测试不同的音频源（若有）。</p> <p>按照放置原则放置低音箱。请参阅低音箱的用户指南（请参见第 26 页）。</p> <p>揭下低音箱上的所有保护膜。</p> <p>如果使用 3.5 mm 音频连接线（未提供）进行连接，请确保将连接线连接到条形音箱背面的 BASS 连接器，不要连接到 AUX IN 或 IR 连接器。</p>
环绕扬声器的音质差或失真	<p>测试不同的音频源（若有）。</p> <p>根据放置指南放置您的环绕扬声器。请参阅环绕扬声器的用户指南（请参见第 26 页）。</p> <p>确保扬声器连接线的正极和负极牢固地插入适配器。将适配器牢固地插入扬声器中。</p> <p>如果将扬声器放在橱柜或书架中，请将扬声器的前部尽可能接近书架的前缘，以获得最佳的声学性能。</p>
低音过重或过低	<p>调整低音（请参见第 20 页）。</p> <p>将低音箱远离附近的墙体和墙角。</p> <p>根据放置指南放置低音箱。请参阅低音箱的用户指南（请参见第 26 页）。</p>
条形音箱无法播放正确信号源的音频或延迟后选择了错误的信号源。	<p>使用 Bose 音乐应用将 CEC 设置为交替开启。</p> <p>在音频源上禁用 CEC。请参阅音频源用户指南。</p>
条形音箱和音频源无法同时打开/关闭	<p>按下遥控器上的不同步音频源的按钮。</p> <p>按下“电源”按钮  以打开/关闭音频源。</p>

症状	解决方案
条形音箱无法连接到 Wi-Fi 网络	<p>在 Bose 音乐应用中，选择正确的网络名称，并输入网络密码（区分大小写）。</p> <p>确保条形音箱和移动设备连接的是相同的 Wi-Fi 网络。</p> <p>如果您的网络信息已发生变化，请参见第 14 页。</p> <p>启用用于设置的移动设备上的 Wi-Fi。</p> <p>在移动设备上关闭打开的其他应用。</p> <p>重启移动设备和路由器。</p> <p>如果您的路由器支持 2.4 GHz 和 5 GHz 带宽，确保移动设备和条形音箱连接的是同一带宽。</p> <p><b>注意：</b>为每个带宽提供一个唯一的名称，以保证您连接到正确的带宽。</p> <p>拔出条形音箱和选配低音箱或环绕扬声器的电源线，等待 30 秒，然后再将其牢固地插入交流（市电）插座中。卸载移动设备上的 Bose 音乐应用，重新安装应用并重新开始设置。</p> <p>使用以太网连接线连接网络。</p> <p>如果连接到不同的网络且应用没有提示您进行设置，请转到主屏幕并添加条形音箱。</p>
条形音箱无法连接到 Bluetooth 设备	<p>关闭移动设备上的 <i>Bluetooth</i> 功能，然后再将其打开。从 <i>Bluetooth</i> 列表中删除条形音箱。再次连接（请参见第 21 页）。</p> <p>连接其他移动设备（请参见第 22 页）。</p> <p>确保您使用的是兼容 <i>Bluetooth</i> 的移动设备。</p> <p>从移动设备的 <i>Bluetooth</i> 列表中删除条形音箱。再次连接（请参见第 21 页）。</p> <p>清空条形音箱设备列表（请参见第 22 页）。再次连接（请参见第 21 页）。</p>
条形音箱无法使用 AirPlay 流传输音频	<p>确保您的条形音箱已打开且在连接范围内（请参见第 17 页）。</p> <p>确保 Apple 设备和条形音箱在相同 Wi-Fi 网络中。</p> <p>更新 Apple 设备。</p> <p>确保条形音箱是最新版本（请参见第 31 页）。</p> <p>如果在要从流传输音乐的音乐应用中找不到 AirPlay 图标 ，可以从“控制中心”流传输音频。</p> <p>如需更多支持，请访问：<a href="https://www.apple.com/airplay">https://www.apple.com/airplay</a></p>

症状	解决方案
<b>Bose 音乐应用无法在移动设备上运行</b>	<p>确保您的移动设备与 Bose 音乐应用兼容，并满足最低系统要求。有关更多信息，请参见您移动设备上的应用商店。</p> <p>卸载移动设备上的 Bose 音乐应用，重新安装应用并重新开始设置（请参见第 14 页）。</p>
<b>条形音箱未连接到 Bose SoundLink Bluetooth 扬声器或 Bose 耳机</b>	<p>确保您的扬声器或耳机已通电，距离条形音箱 9 m 以内，并已准备好连接到其他设备。有关更多信息，请参阅产品的用户指南。</p>
<b>条形音箱无法重新连接到之前连接的 Bose SoundLink Bluetooth 扬声器</b>	<p>在您的扬声器上，使用产品控制器循环浏览产品设备列表，直到听到条形音箱的名称。有关产品专用说明，请参阅扬声器的用户指南。</p>
<b>条形音箱无法重新连接到之前连接的 Bose 耳机</b>	<p>使用 Bose 音乐应用连接。您可以从“设置”菜单中访问此选项。</p>
<b>连接的 Bose SoundLink Bluetooth 扬声器或 Bose 耳机播放的音频有延迟</b>	<p>并非所有 Bose SoundLink Bluetooth 扬声器在连接到条形音箱时都能在播放音频时实现完美同步。要检查产品是否兼容，请访问：<a href="http://worldwide.Bose.com/Support/Groups">worldwide.Bose.com/Support/Groups</a></p> <p>为扬声器或耳机安装任何可用的软件更新。若要检查更新，请在移动设备上打开与您产品对应的 Bose 应用，或在您的计算机上访问 <a href="http://btu.Bose.com">btu.Bose.com</a></p>

## 重置条形音箱

出厂复位会清除条形音箱的所有音频源、音量、网络 and ADAPTiQ 音频校准设置，并将其恢复为最初的出厂设置。

1. 按住遥控器上的“电源”按钮  和“快进”按钮  5 秒钟，直到灯柱呈白色闪动两次，然后逐渐变暗。



条形音箱重置。重置完成后，灯柱呈琥珀色亮起。

如果您不需要将条形音箱添加到网络中，那么到此，重置就完成了。如果您要将条形音箱添加到网络中，请继续执行第 2 步。

2. 要设置条形音箱的网络和音频设置：
  - a. 在移动设备上启动 Bose 音乐应用并将条形音箱添加至网络。
  - b. 使用 Bose 音乐应用运行 ADAPTiQ 音频校准（请参见第 15 页）。

## 连接选项


使用以下连接选项之一将条形音箱连接到电视：

- **选项 1（优先）：** HDMI eARC（增强型音频回传通道）或 ARC
- **选项 2：** 光纤

**注意：** 通过使用您电视的 HDMI eARC 端口，您可以使用电视遥控器控制条形音箱的电源、音量和静音功能。

1. 在电视背面，找到 **HDMI IN** 和 **Audio OUT**（光纤）端口。

**注意：** 您的电视端口面板可能与图示有所不同。请查看端口的形状。

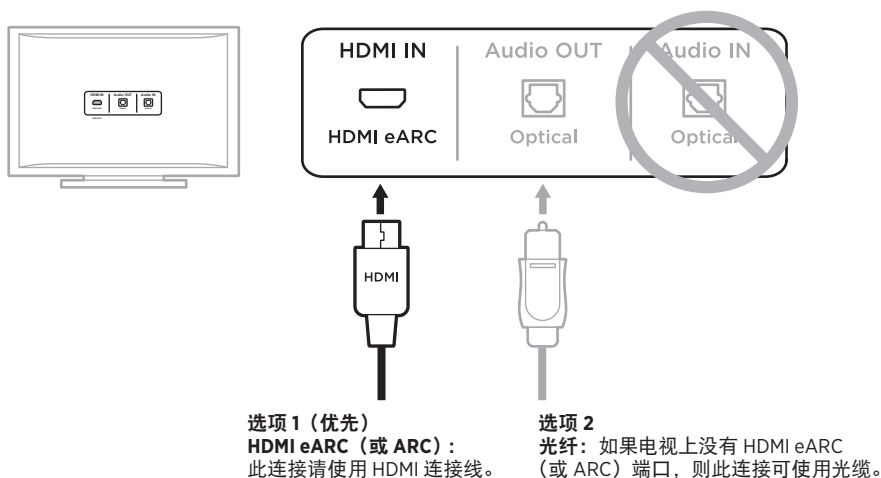


2. 选择音频连接线。

## 将条形音箱连接到电视

选择音频连接线后，将条形音箱连接到电视。

### 选项 1（优先）：HDMI eARC 或 ARC

1. 将 HDMI 连接线的一端插入电视的 **HDMI eARC 或 ARC** 端口。
2. 将连接线的另一端插入条形音箱上的 **HDMI (eARC)** 端口。

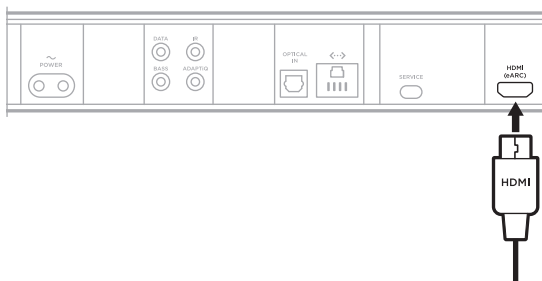

## 选项 2：光纤

如果电视上没有 HDMI eARC（或 ARC）端口，请使用光缆将条形音箱连接到电视。

1. 拆除光缆两端的保护盖。




**小心：**如果插入带有保护盖的插头，可能会损坏插头和/或端口。

2. 将光缆的一端插入电视的 **Optical OUT** 端口中。

**小心：**如插入插头时定位不正确，可能会损坏插头和/或端口。

3. 握住光缆另一端的插头。
4. 将插头对准条形音箱的 **OPTICAL IN** 端口，，并小心插入。

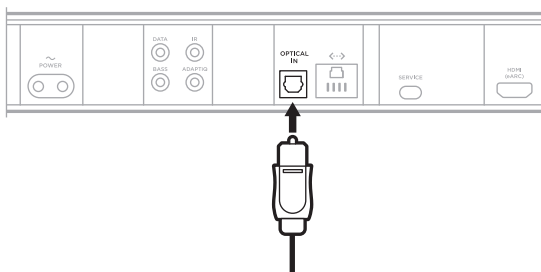

**注意：**端口带有铰链门，插入插头时铰链门会向内旋。

5. 请将插头牢固地插入端口中，直到听到或感觉到咔哒一声。




## 检查声音效果

1. 打开电视。
2. 关闭电视扬声器。

**注意：**请参阅电视的用户指南，了解详细信息。

3. 如果您在使用有线电视/机顶盒或其他辅助音频源：
  - a. 打开音频源的电源。
  - b. 选择正确的电视输入。
4. 打开条形音箱的电源（请参见第 17 页）。

条形音箱将发出声音。

5. 按下遥控器上的“静音”按钮 .

电视扬声器或条形音箱应该不会发出声音。

**注意：**如果在条形音箱静音后听到电视中发出声音，请参见第 35 页上的“声音来自电视扬声器”。

## 請閱讀並保管好所有安全、安全性和使用指示。

### 重要安全指示

閱讀這些指示。

只能用乾布清潔。

請勿堵塞任何通風口。請按照製造商的指示安裝。

請勿將其安裝在任何熱源旁，例如暖氣片、熱調節裝置、火爐或可產生熱量的其他裝置（包括擴音器）。

只能使用製造商指定的附件/配件。

任何維修事宜均請向合格的人員諮詢。如果本裝置有任何損壞，均需進行維修，例如電源線或插頭受損；液體濺入或物體落入裝置內；本裝置受雨淋或受潮、不能正常工作或跌落。

### 警告/小心



此符號表示產品外殼內存在未絕緣的危險電壓，可能造成觸電危險。



此符號表示本指南中提供了重要的操作和維護指示。



包含小零件，可能導致窒息危險。不適合3歲以下的兒童使用。




本產品含有磁性材料。諮詢醫生了解此裝置是否會影響植入式醫療裝置。



本產品含有強化玻璃表面。請小心使用以避免撞擊。如果破損，請小心處理破碎的玻璃。

- 為降低著火或電擊的危險，請勿使本產品受雨淋、被液體淋或受潮。
- 本產品不得受液體淋濺或噴灑，不得將裝有液體的物體（如花瓶等）置於本產品上或本產品附近。
- 保持產品遠離火源和熱源。請勿將明火火源（如點燃的蠟燭）置於本產品上或靠近本產品。
- 未經授權切勿擅自改裝本產品。
- 切勿為此產品使用逆變器。
- 請勿在汽車或船舶上使用本產品。
- 如果將電源插頭或裝置聯結器作為斷路裝置，則斷路裝置應保持可隨時還原工作的狀態。
- 只能使用以下硬體安裝本產品：Bose 條形音箱托架。
- 放置產品時，請確保它沒有阻塞電視或監視器上的任何通風孔。請參閱電視或監視器隨附的使用者指南，並按照製造商的指示進行安裝。
- 由於有通風需求，Bose 不推薦把產品放置在有限的空間中，例如壁封或閉式櫥櫃。
- 請將電池存放於兒童無法取得之處。
- 若處理不當，電池可能導致著火或化學灼傷。請勿對其充電、拆解、加熱或焚燒。

## 中國危險物質限用表

有毒或有害物質或元素的名稱及成分						
	有毒或有害物質或元素					
零件名稱	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (CR(VI))	多溴化聯苯 (PBB)	多溴二苯醚 (PBDE)
印刷電路板	X	0	0	0	0	0
金屬零件	X	0	0	0	0	0
塑膠零件	0	0	0	0	0	0
揚聲器	X	0	0	0	0	0
連接線	X	0	0	0	0	0
此表格根據 SJ/T 11364 條款編製。 0：表示此零件中所有同類物質包含的有毒或有害物質低於 GB/T 26572 中的限定要求。 X：表示此零件使用的同類物質中至少有一種包含的有毒或有害物質高於 GB/T 26572 中的限定要求。						

**生產日期：**序號中第八位數字表示生產年份；「1」表示 2011 年或 2021 年。

**中國進口商：**Bose 電子（上海）有限公司，上海市閔行區顧戴路 2337 號豐樹商業城塔樓 D 第 6 層（郵編：201100）

**輸入額定：**100 - 240V ~ 50/60Hz, 65W

CMIT ID 位於條形音箱背面的產品標籤之上。

#### 安全性資訊




本產品能夠接收來自 Bose 提供的自動安全性更新。要接收自動安全性更新，您必須完成 Bose 音樂應用程式中的產品設定流程並將產品連接至網際網路。**如果您沒有完成設定流程，您需要自行安裝 Bose 屆時提供的安全性更新。**

Apple、Apple 標誌、Apple Music 以及 AirPlay 是 Apple Inc. 在美國和其他國家註冊的商標。App Store 是 Apple Inc. 的服務標記。

使用「Apple 專用」標記表示此配件的設計專門用來與標記中認定的技術配合使用，並且通過了開發商的認證，符合 Apple 的效能標準。

Bluetooth® 文字標記和標誌是由 Bluetooth SIG, Inc. 所擁有的註冊商標，Bose Corporation 對上述標記的任何使用都遵守授權規定。

 Dolby、Dolby Atmos 以及雙 D 符號是 Dolby Laboratories Licensing Corporation 的商標。經 Dolby Laboratories 的授權製造。尚未發表的機密作品。Copyright 2012-2020 Dolby Laboratories。保留所有權利。

Android 是 Google LLC. 的商標。

 HDMI、HDMI High-Definition Multimedia Interface 和 HDMI 標誌是 HDMI Licensing Administrator, Inc. 的商標或註冊商標。



此產品受 Microsoft 特定智慧財產權的保護。未經 Microsoft 授權，禁止超出此產品的範圍之外使用或分發此技術。

Wi-Fi 是 Wi-Fi Alliance® 的註冊商標。

ADAPTiQ、Bose、Bose Bass Module、Bose Noise Cancelling Headphones、Bose Soundbar、Bose Soundbar Wall Bracket、Bose Surround Speakers、QuietComfort、SimpleSync、SoundLink 和 SoundLink Revolve 是 Bose Corporation 的商標。

©2022 Bose Corporation。未經事先書面許可，不得複製、修改、發行或以其他方式使用本指南的任何部分。

要查看作為 Bose Soundbar 850 產品的元件隨附的第三方套裝軟體的授權揭露：

1. 按住遙控器上的 *Bluetooth* 按鈕  和「快退」按鈕  5 秒鐘。
2. 將一條 USB 連接線連接至條形音箱背面的 SERVICE 連接器。
3. 將連接線的另一端連接至電腦。
4. 在電腦的瀏覽器視窗中輸入 <http://203.0.113.1/opensource> 即可顯示 EULA 和授權揭露。

## 裝箱單

內件 .....	9
----------	---

<b>DOLBY ATMOS® 技術</b> .....	10
------------------------------	----

## 條形音箱放置

建議 .....	11
牆式安裝條形音箱 .....	12
調整牆裝音訊 .....	12

## 設定條形音箱

將條形音箱連接至電源 .....	13
網路待命 .....	13

## BOSE 音樂應用程式設定

下載 Bose 音樂應用程式 .....	14
連接至其他 Wi-Fi 網路或從網路中移除 .....	14

## ADAPTiQ 音場調校

運行 ADAPTiQ 音場調校 .....	15
-----------------------	----

## 條形音箱控制項

遙控器功能 .....	16
打開/關閉電源 .....	17
自動喚醒（僅光纖連線） .....	17
音訊源 .....	18
媒體播放和音量 .....	19
調整音量 .....	20

## **BLUETOOTH 連接**

連接行動裝置.....	21
斷開行動裝置.....	22
重新連接行動裝置.....	22
連接其他行動裝置.....	22
清空條形音箱裝置清單.....	22

## **使用 AIRPLAY 串流音訊**

從「控制中心」串流音訊 .....	23
從應用程式串流音訊.....	23

## **條形音箱狀態**

Wi-Fi® 狀態 .....	24
Bluetooth 狀態 .....	24
媒體播放和音量狀態.....	25
更新和錯誤狀態.....	25

## **連接 BOSE 產品**

使用 Bose 音樂應用程式連接（優先）.....	26
使用遙控器連接.....	27
使用音訊連接線連接 Bose 低音箱.....	28
使用 SimpleSync™ 技術連接 Bose SoundLink Bluetooth 揚聲器或 Bose 耳機.....	29
優點.....	29
相容產品.....	29
使用 Bose 音樂應用程式連接 .....	30
重新連接 Bose SoundLink Bluetooth 揚聲器或 Bose 耳機 .....	30

## 維護與保養

更新條形音箱 .....	31
安裝遙控器電池 .....	31
清潔條形音箱 .....	32
更換零件和配件 .....	32
有限保固 .....	32

## 疑難排解

首先嘗試這些解決方案 .....	33
其他解決方案 .....	33

## 附錄：設定參考


重設條形音箱 .....	39
連接選項 .....	40
將條形音箱連接至電視 .....	41
選項 1（優先）：HDMI eARC 或 ARC .....	41
選項 2：光纖 .....	42
檢查聲音效果 .....	43

## 內件


請確認包裝箱中內含以下零件：




Bose Soundbar 850




遙控器




AAA 電池 (2)



電源線



HDMI 連接線



光纖



ADAPTiQ 耳機


**注意：**如果產品的任何部分損壞或條形音箱的玻璃破損，請勿使用。請連絡 Bose 授權經銷商或 Bose 客戶服務中心。

請造訪：[worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)


Bose Soundbar 850 支援 Dolby Atmos® 技術。條形音箱使用額外的向上揚聲器來提供全方向的高音質，實現一流、完全包圍的沉浸式環繞聲體驗。

## 建議

- 將條形音箱放在電視機下方和前面（最佳），或放在電視上方，使條形音箱前側朝向房間。
- 為獲得最佳音質，請確保條形音箱（向上揚聲器）頂部的揚聲器沒有被遮擋。
- 將條形音箱安裝在牆壁上時，請確保條形音箱的頂部距離電視至少有 10 cm 的距離。
- 如果將條形音箱放在架子或電視架上，一定要使條形音箱前側儘量靠近架子或電視架前沿以獲得最佳音質。
- 將條形音箱放於金屬櫃之外並遠離金屬櫃、其他音訊/視訊元件和直接熱源。
- 將條形音箱放在橡膠底座上並置於穩定的水平表面。為保證適當支撐，兩個支腳都必須靠在表面上。振動會導致條形音箱移動，尤其在光滑表面（大理石、玻璃或高度拋光的木材）上，這種情況特別突出。
- 使條形音箱的後側與任何其他表面保持至少 1 cm 的距離。堵塞這一側的連接埠會影響音質。
- 確保附近有交流（幹線）插座。
- 為了避免無線干擾，應使其他無線裝置遠離條形音箱至少 0.3 - 0.9 公尺。
- 為避免無線干擾，某些 Wi-Fi 存取點可能需要放在距離條形音箱、選配的低音箱和選配的環繞揚聲器 2.4 - 3.0 公尺以外的地方。
- 為了獲得最佳音質，請勿將條形音箱放置於封閉式機櫃或斜放在角落。
- 請勿在條形音箱上放置任何物品。

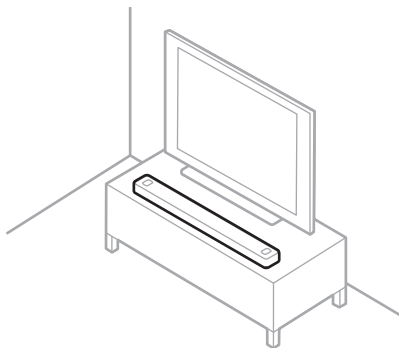

**小心：**在使用時請勿將條形音箱正面、背面或頂部朝下。

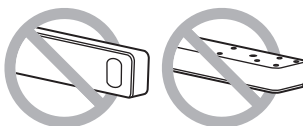


## 牆式安裝條形音箱

您可以在牆壁上安裝條形音箱。要購買 Bose 條形音箱壁掛架，請連絡授權的 Bose 經銷商。

請造訪：[worldwide.Bose.com/Support/SB850](http://worldwide.Bose.com/Support/SB850)

**注意：**請確保條形音箱的頂部距離電視至少有 10 cm 的距離。

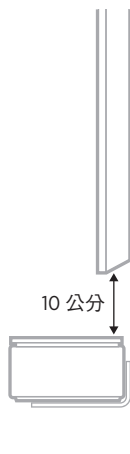

**小心：**不要使用任何其他硬體安裝條形音箱。


## 調整牆裝音訊

安裝條形音箱後，請務必運行 ADAPTiQ（請參見第 15 頁）。

**注意：**從牆上取下條形音箱時，請再次運行 ADAPTiQ。

## 將條形音箱連接至電源

1. 將電源線連接至條形音箱背面的 POWER 連接埠。
2. 將電源線的另一端插入交流（幹線）電源插座。

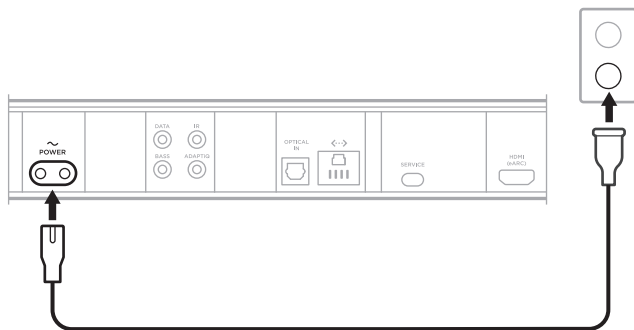


條形音箱電源隨即開啟，指示燈柱亮起琥珀色光。

## 網路待命

音訊停止且 20 分鐘沒有按任何按鈕後，條形音箱將切換至網路待命狀態。

要從網路待命狀態喚醒條形音箱：

- 按下遙控器上的「電源」按鈕  或音訊源按鈕（請參見第 18 頁）。
- 使用行動裝置或 Bose 音樂應用程式播放或恢復音訊。

**注意：**您可以使用 Bose 音樂應用程式來停用待命計時器。您可以從「設定」功能表中存取此選項。

您可在任何行動裝置（例如智慧型手機或平板電腦）上透過 Bose 音乐應用程式設定和控制條形音箱。

您可以使用此應用程式了解如何設定條形音箱和配件、管理條形音箱設定、選擇自己的語音提示語言、了解正在播放資訊和取得新功能。

## 下載 BOSE 音乐應用程式

1. 在行動裝置上，下載 Bose 音乐應用程式。



2. 請按照應用程式指示操作。

## 連接至其他 WI-FI 網路或從網路中移除

若您的網路名稱或密碼已變更、您想連接至其他網路，或者您想從網路中移除條形音箱，那麼您必須重設條形音箱（請參見第 39 頁）。

使用 Bose 音樂應用程式設定條形音箱後，應用程式會提示您運行 ADAPTiq 音場調校以獲得最佳音質。ADAPTiq 音場調校透過在房間中的多個位置進行音訊測量來根據您收聽區域的音響效果自訂系統聲音。要運行音場調校，需要讓房間安靜 10 分鐘。

在 ADAPTiq 音場調校期間，ADAPTiq 耳機頂部的麥克風（隨條形音箱提供）測量房間的聲音特性以確定最佳音質。

## 運行 ADAPTiq 音場調校

如果您以後再連接選配的低音箱或環繞揚聲器、移動了條形音箱或移動了任何家具，請再次運行 ADAPTiq 音場調校以保證最佳音質。


要運行 ADAPTiq 音場調校，請使用 Bose 音樂應用程式。您可以從「設定」功能表中存取此選項。

條形音箱控制項位於條形音箱頂部和遙控器上。

**提示：**您還可以使用 Bose 音樂應用程式控制條形音箱。

## 遙控器功能

使用遙控器控制條形音箱和 *Bluetooth* 連接。

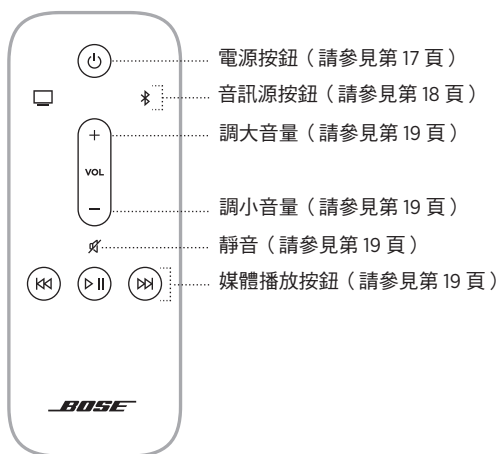

## 打開/關閉電源

按下遙控器上的「電源」按鈕  以打開/關閉條形音箱。




打開電源後，條形音箱會預設連接上次的有效音訊源。

**注意：**將條形音箱插入交流（幹線）插座後，條形音箱會自動打開電源。

## 自動喚醒（僅光纖連線）

您可將條形音箱設定為只要收到聲音訊號便自動喚醒。

要在自動喚醒和預設電源設定之間切換，請按住遙控器  按鈕 10 秒鐘，直至聽到提示音且燈柱呈白色閃爍兩次。

**提示：**您還可以使用 Bose 音樂應用程式控制自動喚醒。您可以從「設定」功能表中存取此選項。

## 音訊源

您可以使用遙控器控制電視和 *Bluetooth* 連接。

要選取音訊源，按下遙控器上相應的按鈕（電視  或 *Bluetooth* ）。



**提示：**您還可以使用 Bose 音樂應用程式選取音訊源。

## 媒體播放和音量



功能	操作
播放/暫停	<p>按下 ▷  。</p> <p><b>注意：</b></p> <ul style="list-style-type: none"> <li>將音訊暫停後，燈柱中央兩個燈會呈白色光閃動，直到音訊恢復。</li> <li>您只能在 Bose 音樂應用程式或 Bluetooth 連接是音訊源時播放/暫停音訊。</li> </ul>
前進	按下 ▷▷。
倒轉	按下 ◀◀。
調大音量	<p>按下 +。</p> <p><b>注意：</b>要快速提高音量，按住 +。</p>
調小音量	<p>按下 -。</p> <p><b>注意：</b>要快速降低音量，按住 -。</p>
靜音/取消靜音	<p>按下 𣪞。</p> <p>將音訊靜音後，燈柱左端會呈白色恆亮，直到音訊繼續。</p> <p><b>提示：</b>您還可以按下 + 以取消音訊靜音。</p>

## 調整音量

要調整低音、高音、中置聲道和高置聲道，請使用 Bose 音樂應用程式。您可以從「設定」功能表中存取這些功能。

## 連接行動裝置

1. 按下遙控器上的 *Bluetooth* 按鈕 。




燈柱閃爍藍色光。

2. 打開行動裝置上的 *Bluetooth* 功能。

**注意：***Bluetooth* 功能表通常在「設定」功能表中。

3. 在裝置清單中選取條形音箱。

**注意：**在 Bose 音樂應用程式中查找您為條形音箱輸入的名稱。如果沒有為條形音箱命名，將顯示預設名稱。

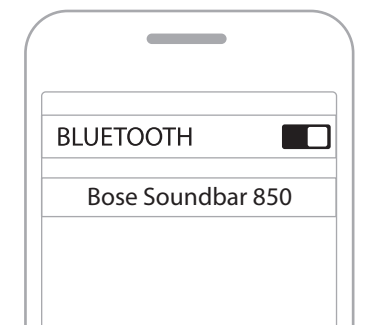

連接後，您會聽到提示音，燈柱恆亮白色光，然後變暗。條形音箱名稱顯示在行動裝置清單中。

## 斷開行動裝置

使用 Bose 音樂應用程式以斷開行動裝置。

**提示：**您也可在行動裝置上使用 *Bluetooth* 設定。停用 *Bluetooth* 功能後，所有其他裝置連接都將中斷。

## 重新連接行動裝置

按下遙控器上的 *Bluetooth* 按鈕 。

條形音箱嘗試連接最近連接的裝置。


**注意：**

- 請確保您的行動裝置已啟用 *Bluetooth* 功能。
- 裝置必須在 9 公尺連接範圍內且已打開電源。

## 連接其他行動裝置


條形音箱的裝置清單最多可以儲存八台裝置。

**注意：**您一次只能播放一台裝置的音訊。

1. 按住遙控器上的 *Bluetooth* 按鈕 ，直到燈柱呈藍色閃動。
2. 從行動裝置的裝置清單中選取條形音箱。

**注意：**請確保您的行動裝置已啟用 *Bluetooth* 功能。

## 清空條形音箱裝置清單

1. 按住遙控器上的  按鈕 10 秒鐘，直到燈柱呈白色閃動兩次，然後逐漸變暗。  
燈柱閃爍藍色光。
2. 從裝置上的 *Bluetooth* 清單中刪除條形音箱。


所有裝置已被清除，並且條形音箱已準備好連接（請參見第 21 頁）。

條形音箱能夠播放 AirPlay 2 音訊，這樣您可以快速將 Apple 裝置的音訊串流到條形音箱或多個揚聲器。


**注意：**

- 要使用 AirPlay 2，您需要一台運行 iOS 11.4 或更高版本的 Apple 裝置。
- Apple 裝置和條形音箱必須連接至相同 Wi-Fi 網路中。
- 關於 AirPlay 的資訊，請造訪：<https://www.apple.com/airplay>


## 從「控制中心」串流音訊

1. 在 Apple 裝置上，開啟「控制中心」。
2. 按住螢幕右上角的音訊卡，然後輕觸 AirPlay 圖示 。
3. 選取條形音箱。

## 從應用程式串流音訊

1. 開啟音樂應用程式（如 Apple Music）並選取要播放的曲目。
2. 輕觸 。
3. 選取條形音箱。

條形音箱正面的 LED 燈柱顯示條形音箱狀態。

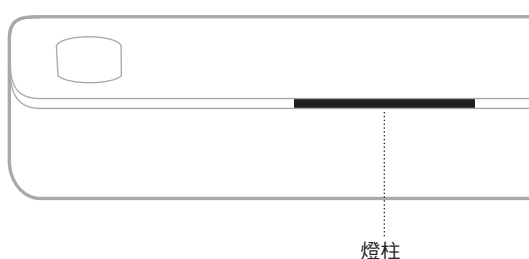

**注意：**燈柱每次顯示所選音訊源的一個狀態。

## WI-FI 狀態

顯示條形音箱的 Wi-Fi 連接狀態。

燈柱活動		系統狀態
慢閃白色光		正在連接至 Wi-Fi
恆亮白色光，然後逐漸變黑		已連接至 Wi-Fi


## BLUETOOTH 狀態

顯示行動裝置的 Bluetooth 連接狀態。

燈柱活動		系統狀態
慢閃藍色光		準備連接至行動裝置
慢閃白色光		正在連接行動裝置
恆亮白色光，然後逐漸變黑		已連接至行動裝置
慢閃白色光兩次，然後逐漸變黑		清空裝置清單







## 媒體播放和音量狀態

控制媒體播放和音量時顯示條形音箱狀態。

燈柱活動		系統狀態
兩個中間指示燈恆亮白色光		暫停
燈柱右側慢閃白色光		調大音量
燈柱左側慢閃白色光		調小音量
燈柱左側恆亮白色光		靜音

## 更新和錯誤狀態

顯示軟體更新和錯誤提醒的狀態。

燈柱活動		系統狀態
琥珀色光恆亮		正在設定 Wi-Fi
白色光從右向左滑動		正在下載更新
白色光從左向右滑動		正在更新條形音箱
閃動琥珀色光 4 次		音訊源錯誤 —— 參見 Bose 音樂應用程式
閃動紅色光 4 次		暫時無法提交請求 —— 請稍後重試
紅色光恆亮		錯誤 —— 聯絡 Bose 客戶服務中心

您可將以下任意配件連接至您的條形音箱。

- **Bose Bass Module 700**：[Bose.com/BM700](https://Bose.com/BM700)
- **Bose Bass Module 500**：[Bose.com/BM500](https://Bose.com/BM500)
- **Bose Surround Speakers 700**：[Bose.com/SS700](https://Bose.com/SS700)

**注意：**

- 優先選項是使用 Bose 音樂應用程式連接您的配件。
- 您最多可以連接兩個低音箱。要連接，兩者必須是相同的型號並採用無線方式連接。



## 使用 BOSE 音樂應用程式連接（優先）


1. 將配件連接至電源。有關更多資訊，請參閱配件的使用者指南。
2. 在 Bose 音樂應用程式中，選取您的條形音箱。
3. 移至「設定」功能表以新增您的配件。

**注意：**

- 如果條形音箱未連接低音箱，請參見第 35 頁上的「條形音箱無法連接至低音箱」。
- 如果條形音箱未連接環繞揚聲器，請參見第 35 頁上的「條形音箱無法連接至環繞揚聲器」。

## 使用遙控器連接

1. 將配件連接至電源。有關更多資訊，請參閱配件的使用者指南。
2. 按住遙控器上的 *Bluetooth* 按鈕  和「播放/暫停」按鈕  5 秒鐘，直到燈柱呈白色閃動。

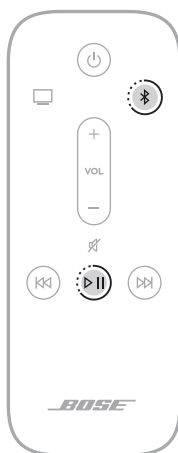

連接後，您會聽到配件發出的提示音，然後燈柱逐漸變暗。

### 注意：


- 如果條形音箱未連接低音箱，請參見第 35 頁上的「條形音箱無法連接至低音箱」。
- 如果條形音箱未連接環繞揚聲器，請參見第 35 頁上的「條形音箱無法連接至環繞揚聲器」。

## 使用音訊連接線連接 BOSE 低音箱


您可以使用 3.5 mm 音訊連接線（未提供）將低音箱連接至條形音箱。

如果您沒有 3.5 mm 音訊連接線（耳機和行動裝置上的常用連接線），請造訪 [worldwide.Bose.com/Support/SB850](http://worldwide.Bose.com/Support/SB850) 來購買 4.5 m 連接線。您也可以在本本地電子材料行購買此連接線。

1. 將 3.5 mm 音訊連接線的一端連接至低音箱背面的 **BASS IN** 連接器。
2. 將音訊連接線的另一端連接至條形音箱背面的 **BASS** 連接器。

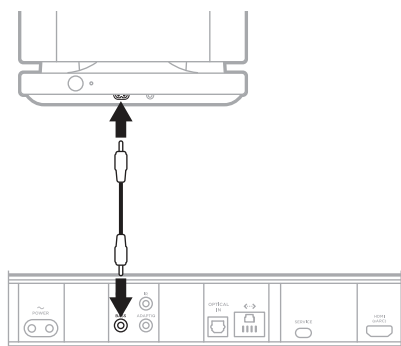

Bose Bass Module 500

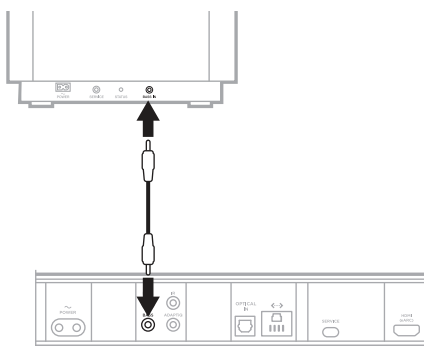

Bose Bass Module 700

3. 檢查聲音效果（請參見第 42 頁）

## 使用 SIMPLESYNC™ 技術連接 BOSE SOUNDLINK BLUETOOTH 揚聲器或 BOSE 耳機

透過 Bose SimpleSync™ 技術，您可以將特定 Bose SoundLink *Bluetooth* 揚聲器或 Bose 耳機連接條形音箱，以全新的方式收聽音樂和電影。

### 優點

- **個人電視聆聽體驗：**將 Bose 耳機連接條形音箱，即可收聽電視音訊，而不會干擾其他人。透過每種產品的獨立音量控制，在您將條形音箱的音量降低或調成靜音的同時，耳機聆聽的音量可以隨您喜愛，要多大聲就多大聲。
- **另一個房間的音訊：**將 Bose SoundLink *Bluetooth* 揚聲器連接至條形音箱，即可同時在兩間不同的房間收聽同一首歌曲。

**注意：**SimpleSync™ 技術的 *Bluetooth* 連接範圍為 9 公尺。牆壁或建材可能會影響接收效能。

### 相容產品

您可以將大多數 Bose SoundLink *Bluetooth* 揚聲器連接至條形音箱以及 Bose 耳機。

熱門的相容產品包括：

- Bose SoundLink Revolve+ *Bluetooth* 揚聲器
- Bose SoundLink Mini *Bluetooth* 揚聲器
- Bose SoundLink Color *Bluetooth* speaker
- Bose Noise Cancelling Headphones 700
- Bose QuietComfort 35 無線耳機

新產品將定期新增。如需完整清單和更多資訊，請造訪：  
[worldwide.Bose.com/Support/Groups](http://worldwide.Bose.com/Support/Groups)

## 使用 Bose 音樂應用程式連接

要將您的 Bose SoundLink *Bluetooth* 揚聲器或 Bose 耳機連接至條形音箱，使用 Bose 音樂應用程式。如需詳細資訊，請造訪：[worldwide.Bose.com/Support/Groups](http://worldwide.Bose.com/Support/Groups)

### 注意：

- 確定要連接的產品已打開電源、在條形音箱的 9 公尺連接範圍內及可連接其他裝置。有關更多資訊，請參閱產品的使用者指南。
- 每次只可將一種產品連接至條形音箱。

## 重新連接 BOSE SOUNDLINK *BLUETOOTH* 揚聲器或 BOSE 耳機

打開 Bose SoundLink *Bluetooth* 揚聲器或 Bose 耳機的電源。

揚聲器或耳機嘗試連接最近連接的 *Bluetooth* 裝置，包括條形音箱。

### 注意：


- 條形音箱必須在連接範圍內（9 公尺）且已打開電源。
- 如果揚聲器未連接，請參見第 38 頁上的「條形音箱無法重新連接至之前連接的 Bose 耳機」。
- 如果耳機未連接，請參見第 38 頁上的「條形音箱無法重新連接至之前連接的 Bose 耳機」。

## 更新條形音箱


當連接至 Bose 音樂應用程式和 Wi-Fi 網路時，條形音箱會自動更新。

## 安裝遙控器電池

1. 滑開遙控器背面的電池倉蓋。

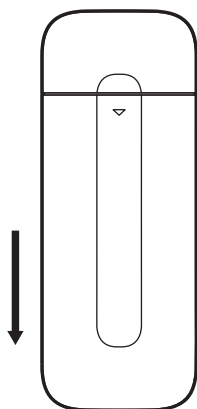

2. 插入隨附的兩節 AAA (IEC-LR3) 1.5 V 電池。將電池上的 + 和 - 符號與電池盒內的 + 和 - 標記相對應。

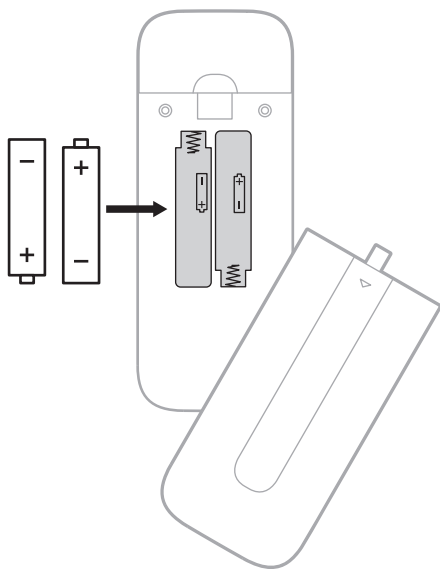

3. 將電池倉蓋滑回原位。

## 清潔條形音箱

用柔軟的乾布擦拭條形音箱外部表面。

### 小心：

- 切勿讓液體濺入條形音箱或任何開口。
- 請勿將空氣吹入向上揚聲器或條形音箱。
- 請勿使用吸塵器清潔向上揚聲器或條形音箱。
- 請勿在向上揚聲器或條形音箱附近使用噴霧劑。
- 請勿使用任何溶劑、化學品或含酒精、氨水、研磨劑的清潔劑。
- 切勿讓物體落入任何開口中。

## 更換零件和配件

可透過 Bose 客戶服務中心訂購更換零件和配件。

請造訪：[worldwide.Bose.com/Support/SB850](https://worldwide.Bose.com/Support/SB850)

## 有限保固

條形音箱享受有限保固。有關有限保固的詳細資訊，請造訪我們的網站：[global.Bose.com/warranty](https://global.Bose.com/warranty)。

要註冊您的產品，請造訪 [global.Bose.com/register](https://global.Bose.com/register) 以取得說明。未執行註冊並不影響您的有限保固權利。

## 首先嘗試這些解決方案



如果條形音箱出現問題：


- 確保條形音箱插入了通電的交流（幹線）插座中。
- 接好所有連接線。
- 檢查條形音箱的狀態（請參見第 24 頁）。
- 下載 Bose 音樂應用程式並運行可用的軟體更新。
- 按照放置原則放置條形音箱（請參見第 11 頁）。
- 將條形音箱移至行動裝置的建議範圍內，以確保其能夠正常工作。
- 請將條形音箱與無線裝置保持至少 0.3 – 0.9 公尺的連接距離。
- 檢查 Wi-Fi 存取點是否在距離條形音箱、選配的低音箱和選配的環繞揚聲器 2.4 – 3.0 公尺以外的地方。

## 其他解決方案

若無法解決問題，請參見下表了解常見問題的症狀和解決方法。若仍然無法解決問題，請聯絡 Bose 客戶服務中心。

請造訪：[worldwide.Bose.com/contact](http://worldwide.Bose.com/contact)

症狀	解決方案
電視上無 HDMI eARC 連接埠	使用電視的 HDMI ARC 連接埠。 使用光纖將條形音箱連接至電視。
電視上無 HDMI eARC、HDMI ARC 或光纖連接埠	使用音訊轉換器和獨立的音訊連接線連接電視，例如共軸、3.5 mm 或類比音訊連接線（未提供）。您需要的轉換器和連接線的類型取決於您的電視上可以使用的音訊輸出連接埠。
條形音箱無法開機	將電源線插入另一個交流（幹線）插座中。 使用遙控器打開條形音箱（請參見第 17 頁）。 拔出條形音箱和選配低音箱或環繞揚聲器的電源線，等待 30 秒，然後再將其牢固插入交流（幹線）插座中。
條形音箱無法關機	條形音箱可能處於網路待命模式。按下遙控器上的「電源」按鈕  以喚醒條形音箱。再次按下  以關閉條形音箱。

症狀	解決方案
無法使用 Dolby Atmos 播放音訊	<p>檢查 Bose 音樂應用程式以確認音訊是以 Dolby Atmos 串流。若非以 Dolby Atmos 串流，確認電視的進階音訊設定允許 Dolby Atmos 串流音訊至條形音箱。請參閱電視使用者指南。</p>
遙控器不穩定或失靈	<p>將電池上的 + 和 - 符號與電池盒內的 + 和 - 標記相對應（請參見第 31 頁）。</p> <p>更換電池（請參見第 31 頁）。</p> <p>確定遙控器在條形音箱 6 公尺的工作範圍內。</p> <p>確保遙控器和條形音箱之間有沒任何障礙物。</p>
條形音箱的音訊斷斷續續或無音訊	<p>如果燈柱左側恆亮白光，則條形音箱已靜音。按下「靜音」按鈕  以取消條形音箱的靜音。</p> <p>確定您的行動裝置未靜音。</p> <p>提高條形音箱（請參見第 25 頁）或行動裝置的音量。</p> <p>切換至其他音訊源（請參見第 18 頁）。</p> <p>使用不同應用程式或音樂服務播放音訊。</p> <p>如果音訊來自 Wi-Fi 音訊源，請重設路由器。</p> <p>重新啟動行動裝置。</p> <p>確保您使用的是相容 Bluetooth 的行動裝置。</p> <p>確保條形音箱的 HDMI 連接線已插入電視上標示為 <b>HDMI eARC</b>（增強音訊回傳通道）的連接埠，而不是標準 HDMI 連接埠。如果您的電視沒有 HDMI eARC 連接埠，請連接至 HDMI ARC 連接埠。如果您的電視沒有 ARC 連接埠，請使用光纖連接條形音箱（請參見第 42 頁）。</p> <p>如果條形音箱已連接至電視的 HDMI eARC 或 ARC 連接埠，請確保已啟用電視系統功能表中的 <b>Consumer Electronics Control (CEC)</b>（消費電子產品控制）。您的電視上的 CEC 可能使用其他的名稱。請參閱電視使用者指南。</p> <p>從電視的 HDMI eARC（或 ARC）連接埠上斷開 HDMI 連接線並重新連接。</p> <p>將光纖插入電視上標示為 <b>Output</b> 或 <b>OUT</b> 的連接埠，而非 Input 或 IN 連接埠。</p> <p>拔出條形音箱和選配低音箱或環繞揚聲器的電源線，等待 30 秒，然後再將其牢固插入交流（幹線）插座中。</p> <p>使用 Bose 音樂應用程式將 CEC 設定為<b>交替開啟</b>。</p>

症狀	解決方案
條形音箱無法連接至低音箱	<p>確保您的低音箱與揚聲器相容（請參見第 26 頁）。</p> <p>確認狀態指示燈呈琥珀色閃爍，表明低音箱已準備好連接。</p> <p>重複連接流程（請參見第 26 頁）。</p> <p>拔出條形音箱和低音箱的電源線，等待 30 秒，然後再將其牢固地插入交流（幹線）插座中。</p> <p>使用 3.5 mm 音訊連接線將低音箱連接至條形音箱（請參見第 28 頁）。</p>
條形音箱無法連接至環繞揚聲器	<p>確保您的環繞揚聲器與條形音箱相容（請參見第 26 頁）。</p> <p>確認狀態指示燈呈琥珀色閃爍，表明環繞揚聲器已準備好連接。</p> <p>重複連接流程（請參見第 26 頁）。</p> <p>拔出條形音箱和環繞揚聲器的電源線，等待 30 秒，然後再將其牢固地插入交流（幹線）插座中。</p>
低音箱或環繞揚聲器無音訊	<p>確保低音箱或環繞揚聲器與條形音箱相容（請參見第 26 頁）。</p> <p>切換至其他音訊源（請參見第 18 頁）。</p>
聲音來自電視揚聲器	<p>確保條形音箱的 HDMI 連接線已插入電視上標示為 <b>HDMI eARC</b>（增強音訊回傳通道）的連接埠，而不是標準 HDMI 連接埠。如果您的電視沒有 HDMI eARC 連接埠，請連接至 HDMI ARC 連接埠。如果您的電視沒有 ARC 連接埠，請使用光纖連接條形音箱（請參見第 42 頁）。</p> <p>從電視的 HDMI eARC（或 ARC）連接埠上斷開 HDMI 連接線並重新連接。</p> <p>拔出條形音箱和選配低音箱或環繞揚聲器的電源線，等待 30 秒，然後再將其牢固地插入交流（幹線）插座中。</p> <p>關閉電視揚聲器。請參閱電視使用者指南。</p> <p>將電視音量降到最低。</p> <p>如果條形音箱已連接至電視的 HDMI eARC 或 ARC 連接埠，請確保已啟用電視系統功能表中的 <b>Consumer Electronics Control (CEC)</b>（消費電子產品控制）。您的電視上的 CEC 可能使用其他的名稱。請參閱電視使用者指南。</p> <p>使用 Bose 音樂應用程式將 CEC 設定為<b>交替開啟</b>。</p>



症狀	解決方案
條形音箱的音質差或失真	<p>測試不同的音訊源（若有）。</p> <p>確定您的電視可輸出環繞聲音訊。請參閱電視使用者指南。</p> <p>如果播放的聲音來自另一台裝置，請降低該裝置的音量。</p> <p>使用 Bose 音樂應用程式調整低音音量（請參見第 20 頁）。</p> <p>關閉電視揚聲器。請參閱電視使用者指南。</p> <p>檢查聲音效果（請參見第 43 頁）</p> <p>運行 ADAPTiQ 音場調校（請參見第 15 頁）。</p>
低音箱的音質差或失真	<p>測試不同的音訊源（若有）。</p> <p>按照放置原則放置低音箱。請參閱低音箱的使用者指南（請參見第 26 頁）。</p> <p>取下低音箱上的所有保護膜。</p> <p>如果使用 3.5 mm 音訊連接線（未提供）進行連接，請確保將連接線連接至條形音箱背面的 BASS 連接器，不要連接至 AUX IN 或 IR 連接器。</p>
環繞揚聲器的音質差或失真	<p>測試不同的音訊源（若有）。</p> <p>根據放置指南放置您的環繞揚聲器。請參閱環繞揚聲器的使用者指南（請參見第 26 頁）。</p> <p>確定揚聲器的正極和負極連接線牢固地插入配接器中。將配接器牢固地插入揚聲器中。</p> <p>如果將揚聲器放在櫥櫃中或架子上，請將揚聲器的前部盡可能接近架子的前緣，以獲得最佳的聲學表現。</p>
低音過重或過低	<p>調整低音（請參見第 20 頁）。</p> <p>將低音箱遠離附近的牆體和牆角。</p> <p>根據放置指南放置低音箱。請參閱低音箱的使用者指南（請參見第 26 頁）。</p>
條形音箱無法播放正確訊號源的音訊或延遲後選擇了錯誤的音訊源	<p>使用 Bose 音樂應用程式將 CEC 設定為<b>交替開啟</b>。</p> <p>在音訊源上停用 CEC。請參閱音訊源使用者指南。</p>
條形音箱和音訊源無法同時打開/關閉。	<p>按下遙控器上的不同步音訊源的按鈕。</p> <p>按下「電源」按鈕  以打開/關閉音訊源。</p>

症狀	解決方案
條形音箱無法連接至 Wi-Fi 網路	<p>在 Bose 音樂應用程式中，選擇正確的網路名稱，並輸入網路密碼（區分大小寫）。</p> <p>確保條形音箱和行動裝置連接的是相同的 Wi-Fi 網路。</p> <p>如果您的網路資訊已發生變化，請參見第 14 頁。</p> <p>在您用於設定的行動裝置上啟用 Wi-Fi。</p> <p>在行動裝置上關閉打開的其他應用程式。</p> <p>重新啟動行動裝置和路由器。</p> <p>如果您的路由器支援 2.4 GHz 和 5 GHz 頻寬，確保行動裝置和條形音箱連接的是同一頻寬。</p> <p><b>注意：</b>為每個頻寬提供一個唯一的名稱，以保證您連接至正確的頻寬。</p> <p>拔出條形音箱和選配低音箱或環繞揚聲器的電源線，等待 30 秒，然後再將其牢固地插入交流（幹線）插座中。解除安裝行動裝置上的 Bose 音樂應用程式，重新安裝應用程式並重新開始設定。</p> <p>使用乙太網連接線連接網路。</p> <p>如果連接至不同的網路且應用程式沒有提示您進行設定，請移至主畫面並新增條形音箱。</p>
條形音箱無法連接至 Bluetooth 裝置	<p>關閉行動裝置上的 <i>Bluetooth</i> 功能，然後再將其打開。從 <i>Bluetooth</i> 清單中刪除條形音箱。再次連接（請參見第 21 頁）。</p> <p>連接其他行動裝置（請參見第 22 頁）。</p> <p>確保您使用的是相容 <i>Bluetooth</i> 的行動裝置。</p> <p>從行動裝置的 <i>Bluetooth</i> 清單中刪除條形音箱。再次連接（請參見第 21 頁）。</p> <p>清空條形音箱裝置清單（請參見第 22 頁）。再次連接（請參見第 21 頁）。</p>
條形音箱無法使用 AirPlay 串流音訊	<p>確保您的條形音箱已打開且在連接範圍內（請見第 17 頁）。</p> <p>確保 Apple 裝置和條形音箱在同一個 Wi-Fi 網路中。</p> <p>更新 Apple 裝置。</p> <p>確保條形音箱是最新版本（請參見第 31 頁）。</p> <p>如果在要從中串流音樂的音樂應用程式中找不到 AirPlay 圖示 ，可以從「控制中心」串流音訊。</p> <p>若需更多支援，請造訪：<a href="https://www.apple.com/airplay">https://www.apple.com/airplay</a></p>

症狀	解決方案
<b>Bose 音樂應用程式無法在行動裝置上運行</b>	<p>確保您的行動裝置與 Bose 音樂應用程式相容，並滿足最低系統要求。有關更多資訊，請參見您行動裝置上的應用程式商店。</p> <p>解除安裝行動裝置上的 Bose 音樂應用程式，重新安裝應用程式並重新開始設定（請參見第 14 頁）。</p>
<b>條形音箱未連接至 Bose SoundLink Bluetooth 揚聲器或 Bose 耳機</b>	<p>確定揚聲器或耳機已打開電源、在條形音箱的 9 公尺連接範圍內及可連接其他裝置。有關更多資訊，請參閱產品的使用者指南。</p>
<b>條形音箱無法重新連接至之前連接的 Bose SoundLink Bluetooth 揚聲器</b>	<p>在揚聲器上，使用產品控制項循環查看產品裝置清單，直至聽到條形音箱的名稱。有關產品專用指示，請參閱揚聲器的使用者指南。</p>
<b>條形音箱無法重新連接至之前連接的 Bose 耳機</b>	<p>使用 Bose 音樂應用程式連接。您可以從「設定」功能表中存取此選項。</p>
<b>連接的 Bose SoundLink Bluetooth 揚聲器或 Bose 耳機播放的音訊有延遲</b>	<p>並非所有 Bose SoundLink Bluetooth 揚聲器連接條形音箱時可完全同步播放音訊。如要查看您的產品是否相容，請造訪：<a href="http://worldwide.Bose.com/Support/Groups">worldwide.Bose.com/Support/Groups</a></p> <p>安裝揚聲器或耳機的任何可用軟體更新。若要檢查更新，請在行動裝置上打開與您產品對應的 Bose 應用程式，或在您的電腦上造訪 <a href="http://btu.Bose.com">btu.Bose.com</a></p>

## 重設條形音箱

出廠復位會清除條形音箱的所有音訊源、音量、網路和 ADAPTiQ 音場調校設定，並將其恢復為最初的出廠設定。

1. 按住遙控器上的「電源」按鈕  和「前進」按鈕  5 秒鐘，直到燈柱呈白色閃動兩次，然後逐漸變暗。



條形音箱重設。重設完成後，燈柱呈琥珀色亮起。

若您不需要將條形音箱新增至網路中，那麼至此，重設即完成了。若您要將條形音箱新增至網路中，請繼續完成第 2 步。

2. 要設定條形音箱的網路和音訊設定：
  - a. 在行動裝置上啟動 Bose 音樂應用程式並將條形音箱新增至網路。
  - b. 使用 Bose 音樂應用程式運行 ADAPTiQ 音場調校（請參見第 15 頁）。

## 連接選項


使用以下連接選項之一將條形音箱連接至電視：

- **選項 1（優先）：**HDMI eARC（啟用 Audio Return Channel [ 音訊回傳通道 ]）或 ARC
- **選項 2：**光纖

**注意：**透過使用您電視的 HDMI eARC 連接埠，您可以使用電視遙控器控制條形音箱的電源、音量和靜音功能。

1. 在電視背面，找到 **HDMI IN** 和 **Audio OUT**（光纖）連接埠。

**注意：**您的電視連接埠面板可能與圖示有所不同。請查看連接埠的形狀。

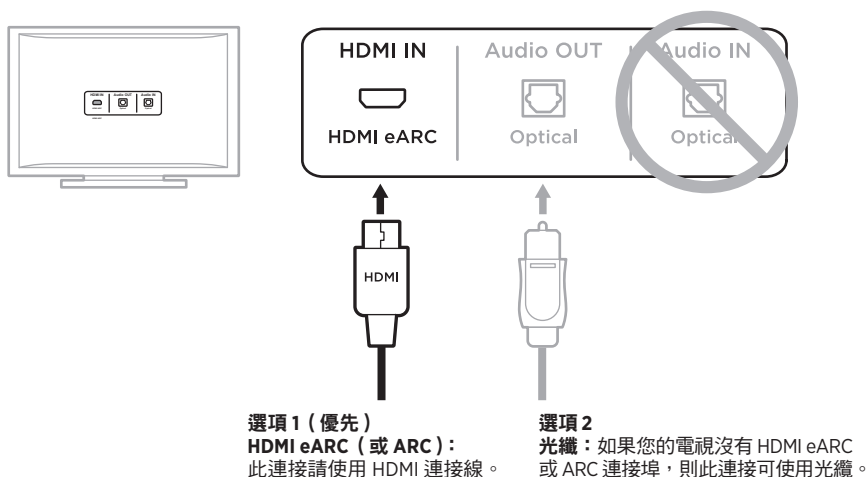


2. 選擇音訊連接線。

## 將條形音箱連接至電視

選擇音訊連接線後，將條形音箱連接至電視。

### 選項 1 (優先)：HDMI eARC 或 ARC

1. 將 HDMI 連接線的一端插入電視的 **HDMI eARC** 或 **ARC** 連接埠。
2. 將連接線的另一端插入條形音箱上的 **HDMI (eARC)** 連接埠。

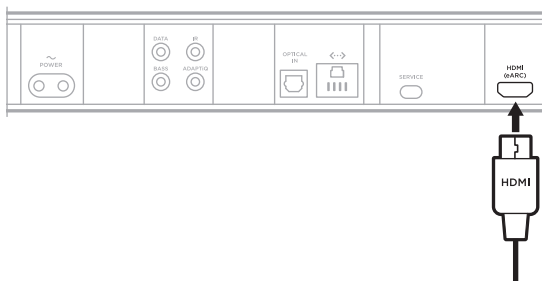

## 選項 2：光纖

如果您的電視沒有 HDMI eARC 或 ARC 連接埠，請使用光纖將條形音箱連接至電視。

1. 移除光纖兩端的保護蓋。




**小心：**如連蓋插入插頭時，則會損壞插頭和/或連接埠。

2. 將光纖的一端插入電視的 **Optical OUT** 連接埠中。

**小心：**如插入插頭時定位不正確，則會損壞插頭和/或連接埠。

3. 握住光纖另一端插頭。
4. 將插頭對準條形音箱的 **OPTICAL IN** 連接埠，並小心插入。

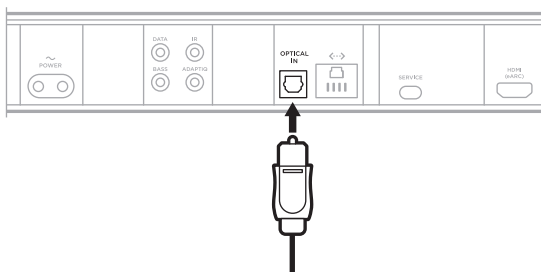

**注意：**連接埠帶有鉸鏈門，插入插頭時鉸鏈門會向內旋。

5. 請將插頭牢固地插入連接埠中，直到聽到或感覺到一聲啉噠聲。




## 檢查聲音效果

1. 打開電視。
2. 關閉電視揚聲器。

**注意：**請參閱電視的使用者指南，了解詳細資訊。

3. 若您在使用有線電視/衛星接收盒或其他輔助音訊源：
  - a. 開啟此音訊源電源。
  - b. 選擇正確的電視輸入。
4. 打開條形音箱的電源（請參見第 17 頁）。

條形音箱將發出聲音。

5. 按下遙控器上的「靜音」按鈕 .

電視揚聲器或條形音箱應該不會發出聲音。

**注意：**如果在條形音箱靜音後聽到電視中發出聲音，請參見第 35 頁上的「聲音來自電視揚聲器」。



868295-0010